

SNOWMAN

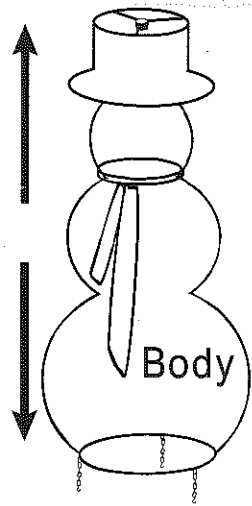


Fig 1

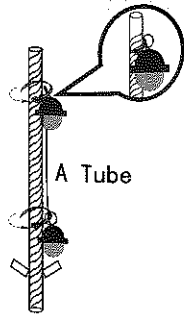


Fig 2

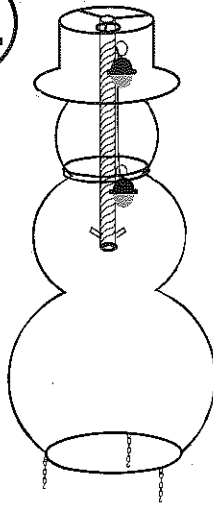


Fig 3


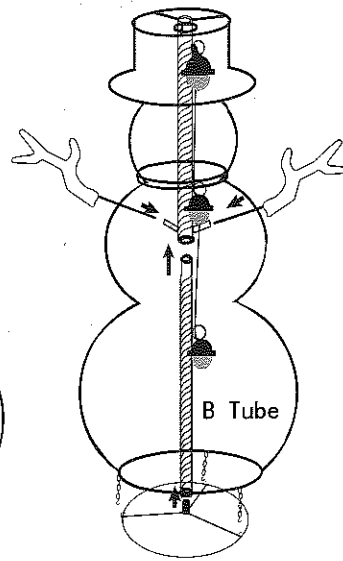


Fig 4

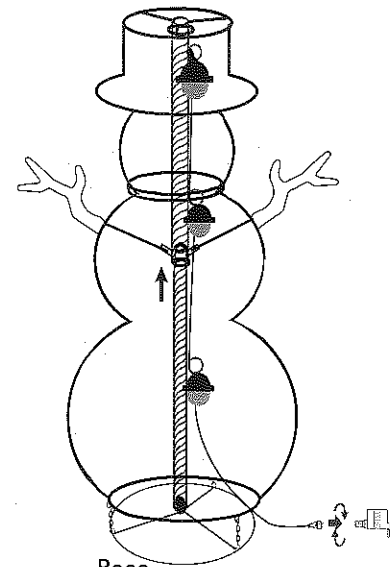

Base
Fig 5

Package Contents/Parts List		
Part	Description	Quantity
A	Tube 1	1
B	Tube 2	1
C	Snowman	1
D	Rotation Lights	1
E	Base	1
F	Hand	2
G	Plastic Tie	10
H	Ground Stakes	4

ASSEMBLY INSTRUCTION

1. Take the snowman out from the box and stretch to shape.
2. Attach the light string to the upper pole with the included plastic ties. To avoid having the light string slide down, make sure the first bulb is fastened to the ring on the top of the upper pole.
3. Follow step 2 make sure the second bulb is fastened to the second ring on the A Tube.
4. Put A tube into snowman body, top to hat.
5. Assemble B tube with Base well. Assemble A tube and B tube well.
6. Follow step 2 make sure the third bulb is fastened to the first ring on the B Tube.
7. Install left hand and right hand well.
8. Secure the snowman to the base by attaching the 3 hooks on the base to the 3 rings on the bottom of the snowman.
9. Secure the item firmly into the ground by pushing 4 lawn stakes through the base.
10. The below 2 components must be linked to light up, and turn the plug cap clockwise until it is secure.



String lights Connector

Thank you for purchasing this product. Please read the instructions and warnings carefully before use to ensure safe and satisfactory operation of this product.

UL LISTED OUTDOOR DIRECT PLUG-IN TRANSFORMER

INPUT: 100~240VAC / 60Hz OUTPUT: 9 VDC 1.2A

LOW VOLTAGE LIGHTING CHAIN

Rated Voltage: 9 VDC

LED Bulb; RED: 2.2-2.4V 350mA GREEN: 3.0-3.2V 350mA BLUE: 3.0-3.2V 350mA

Total number of bulbs in light set : 3 Lamp, 3 LED in each Lamp.

Rated watt of complete light set : 10.8W

CAUTION:

1. Do not operate the lights in the packaging – risk of fire!
2. This item is not a toy! It is only intended as decoration!
3. Keep children and pets at a safe distance from the Christmas silhouette.
4. Grasp plug and remove from the main socket to switch the lights off. Do not pull on the light chain itself.
5. Do not use any steel brackets or nails to attach the light chain. Do not suspend the light chain over sharp edges, hooks or nails.
6. Do not use the light chain if the PVC outer sheath of the cable or the main adapter is damaged. If any damages are discovered you should discontinue using the copper rotation light, and it should be thrown away.
7. Light chain should never be connected electrically to other light chains, fairy lights or other such items.
8. Do not operate the lights in close proximity to gas or electric heaters, naked flames, candles or other heat sources.
9. Danger of overheating! Do not cover the light chain with cloth, paper or any other material. Do not use the light chain inside enclosed furniture, etc.
10. If you are using an extension cord outside, make sure that it is suitable for outdoor use.
11. Extension cords must be suitable for use with the specified power rating (see the packaging and type plate).
12. Before using the lights for the first time, check whether the rated voltage specified on the type plate corresponds to the main voltage!
13. After installation, the main cable and the plug must be free of any tractive and rotary forces.
14. Only plug in the light chain after it has been fully assembled.
15. Danger of electric shock!
16. Do not submerge the light chain in water. Keep the light chain at a distance of at least 5 meters from swimming pools or ponds. Protect the main plug from moisture.
17. The lights can not be replaced!
18. This product contains recyclable materials. Do not dispose this product as unsorted municipal waste. Please contact your local municipality for the nearest recycling point.
19. The power unit that comes with the product is intended to be correctly oriented in a vertical or floor-mount position. Mount the unit at a height greater than 30cm (12”) from the ground. Install only to a covered Class A GFCL receptacle that was a weatherproof enclosure with the attachment plug cap inserted or removed.
20. Unplug the product when leaving the house, or if left unattended.

ASSEMBLY INSTRUCTIONS

A. Carefully open the packaging.

B. Make sure that the main plug is not connected to the socket when assembling the product.

C. Connect the light cable to the main plug and plug the transformer into the socket.