

Cocoon

4 ' B E A N B A G




JAXX®




Cocoon 4' Set-up Instructions

1

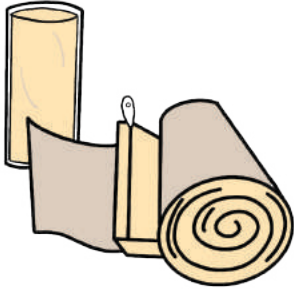


Unroll the plastic film from the foam. DO NOT CUT OPEN or remove the protective liner.

2

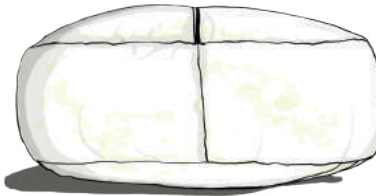

Flip & knead the foam to introduce air back into the micro cushions.

3

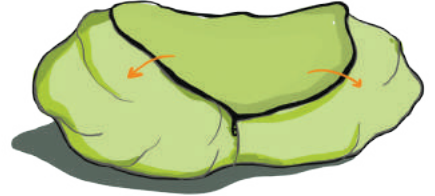

Open the cover like a clamshell and spread it out on the floor.

4



Place the bean bag inside one-half of the clamshell.

5



Fold the cover over the bean bag and zip it closed. Enjoy!

6



Optional: Use a paper clip to open the childproof zipper to add or remove foam from the liner.

Washing instructions (cover only): Machine-wash cold with mild detergent and hang dry. Do not bleach.



Protective Inner Liner



Machine Washable Cover



One Year Warranty

STILL HAVE QUESTIONS?

✉ SERVICE@JAXXLIVING.COM

☎ 1.866.384.2802

11643, 19081 (01)

