 
 


**ASSEMBLY DIAGRAM:**

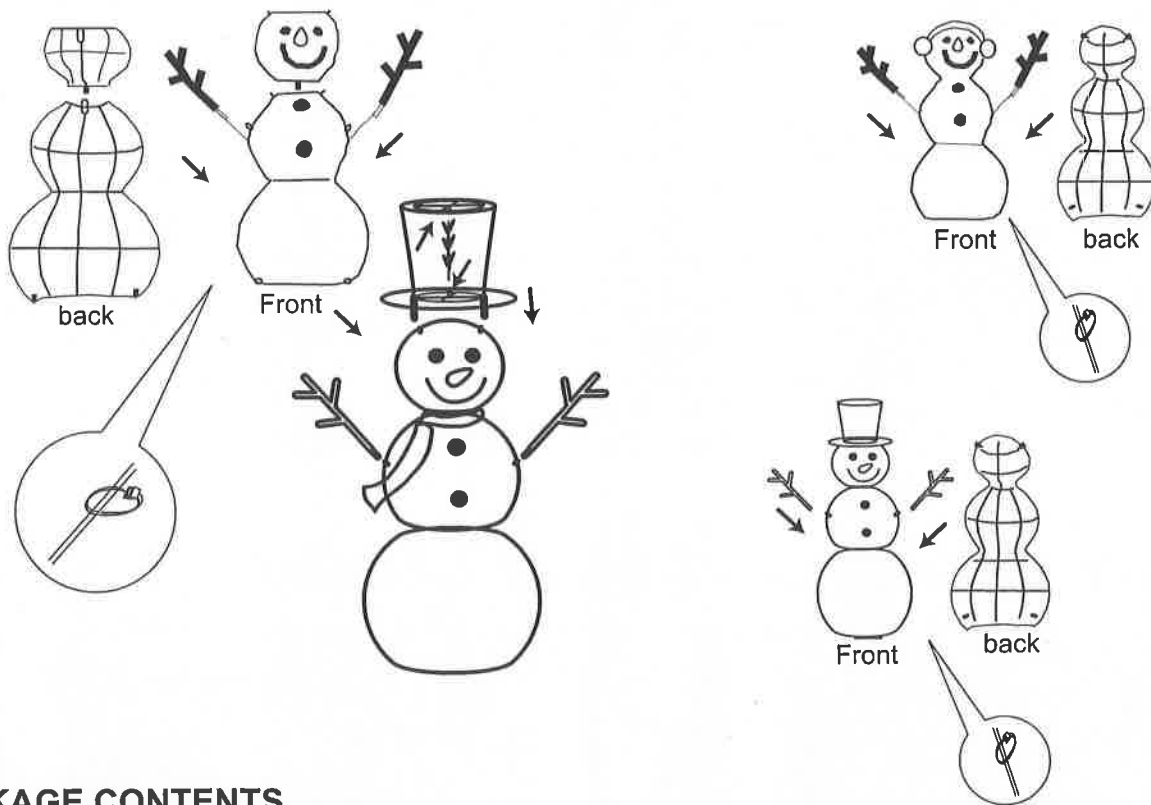

 
**PACKAGE CONTENTS**

Part	Description	Quantity
A1-A3	Snowman Family	3pcs
B	Hat	1pc
C	Tinsel scarf	3pcs
D1-D6	Hand	6pcs
E	Fixing Hook	7pcs

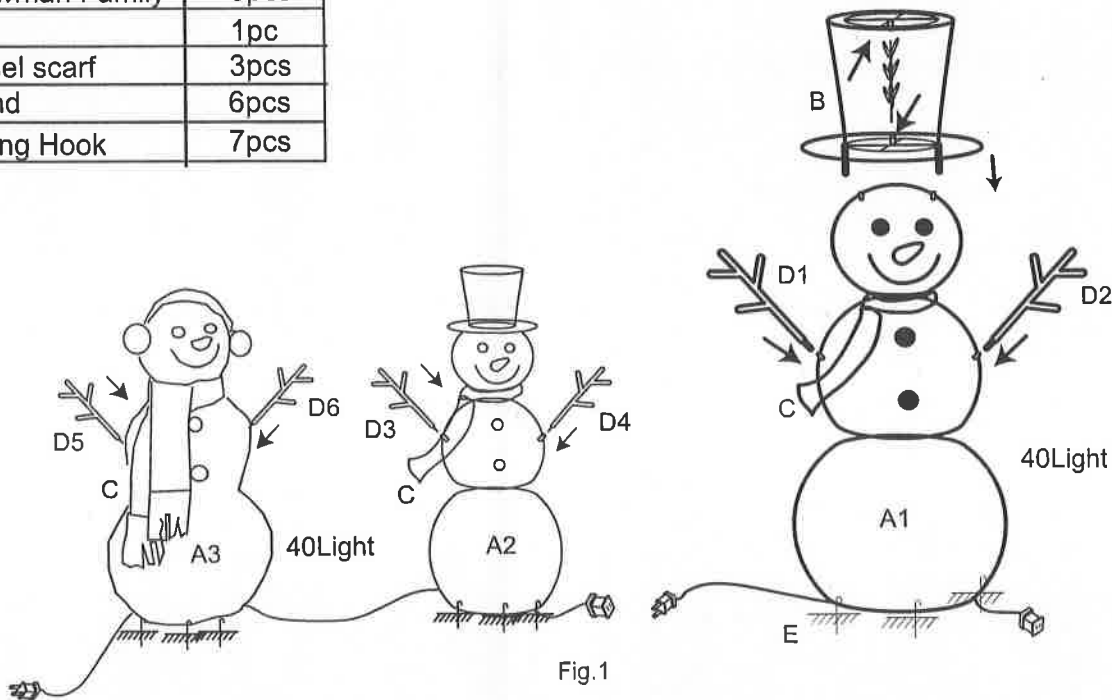

- Step 1: Combine the front and the back side of the snowman to form a 3D snowman- 3 pieces.
- Step 2: Use the plastic pole to erect up the big hat by inserting the pole into the corresponding slot.
- Step 3: Insert the big hat to the Big Snowman's head.
- Step 4: Insert the hand (D1~D6) to the snowman body (A1-3) and finally put on the scarf(C).
- Step 5: When display outdoors, use the included stakes(E) to secure the item to the ground.



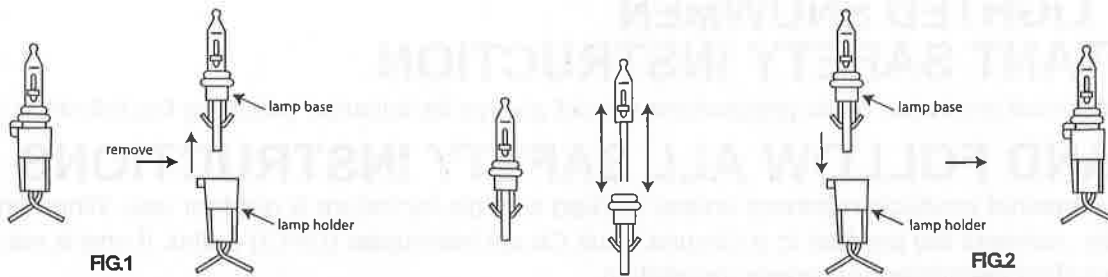

(1) Hold bulb by its base, then pull straight out of socket.

(2) Remove old bulb from its base by straightening bulb wires.

(3) Insert wires of new bulb into holes provided and bend wires upward.

(4) Push new bulb and base into socket. Do not twist.

## CAUTION:

To reduce the risk of fire and electrical shock:

1. Do not mount or support strings in a manner that can cut or damage wire insulation.

## CAUTION:

1. To reduce the risk of overheating, replace burned-out bulbs promptly. Use 6 volt, 0.48 watts super bright type bulbs only.
2. This product contains lamp shunts which allow product to operate if one lamp burns out. Do not replace bulbs with other than the spare bulbs provided with this product.

## DIRECTION:

Always test your light set before decorating. Make sure that all bulbs are firmly in their sockets. Never twist bulbs since this can cause part of the set to go out. If a bulb burns out, replace it promptly to prolong the life of other bulbs. (See bulb replacement instructions)

## ATTENTION:

Due to the nature of the material used, loss of some material during shipment and assembly is to be expected. Please dispose of debris and keep out of reach of children.

## WARNING:

Never leave product unattended while plugged in. Read important safety instructions cautions inside. This is decorative article, not a toy or intended for use by children. For adult use only. It should not be played with or placed where children can reach it.

FOR INDOOR AND OUTDOOR USE

120V 60Hz AC 0.32 A 38.4 Watts

MODEL NO.: DLH-MNF-0179D

UL FILE NO.:E310671

MADE IN CHINA

## REPLACEMENT PARTS LIST

Description	Quantity
Spare bulb	8pcs
Fuse	8pcs
Plastic tie	20pcs

# SET 1 / 3 LIGHTED SNOWMEN IMPORTANT SAFETY INSTRUCTION

When using electrical products, basic precautions should always be followed including the following :

## READ AND FOLLOW ALL SAFETY INSTRUCTIONS

1. Do not use seasonal products outdoors unless marked suitable for indoor & outdoor use. When products are used outside , connect the product to a Ground Fault Circuit Interrupter (GFCI) outlet. If one is not provided, contact a qualified electrician for proper installation.
2. This seasonal use product is not intended for permanent installation or use.
3. Do not mount or place near gas or electric heaters, fireplaces, candles or other similar sources of heat.
4. Do not secure the wiring of the product with staples or nails or place on sharp hooks or nails.
5. Do not let lamps rest on the supply cord or on any wire.
6. Unplug the product when leaving the house, when retiring for the night, or if left unattended.
7. This is an electric product-not a toy! To avoid risk of fire burns, personal injury and electric shock, it should not be played with or placed where small children can reach it.
8. Do not use this product for other than its intended use.
9. Do not hang ornaments or other objects from cord, wire, or light string.
10. Do not close doors or windows on the product or extension cords as this may damage the wire insulation.
11. Do not cover the product with cloth, paper or any material not part of the product when in use.
12. This product is equipped with push-in type bulbs. Do not twist wire or bulbs.
13. This product contains an overload protections fuses. A blown fuse indicates an overload or short-circuit situation. If the fuse blows, unplug the product from the outlet. Also unplug any additional strings or products that may be attached to the product. Replace the fuse as per the user instructions.
14. Read and follow all instructions that are provided with the product.

## SAVE THESE INSTRUCTIONS

### CAUTION:

This lighting string is rated 38.4Watts ( 0.32Amps), do not overload. Connect other lighting strings or decorative outfits end-to-end up to a maximum of 216 Watts (1.8 Amps) total.

If connecting to a lighting string that does not have a wattage (W) rating (found on the tag within 6 inches of the plug), calculate the wattage as follows: Multiply the current, which is on the flag-type tag by 120.

For example: Lighting string is rated 120V, 60Hz, 0.32Amps.  $0.32 \times 120 = 38.4\text{Watts}$

TOTAL AMOUNT OF WATTAGE THAT CAN BE CONNECTED  $216\text{W} - 38.4\text{W} = 177.6\text{W}$

 
### USE AND CARE INSTRUCTIONS

1. Before using, inspect product carefully. Do not use if product has damaged, or frayed cords, cracks in the lamp holders or enclosures, loose connections, or exposed copper wire.
2. When storing the product, carefully remove any debris from the product, including tree branches, to avoid any undue strain or stress on the product conductors, connections, and wires.
3. When not in use, store neatly in a cool, dry location protected from sunlight.

### USER SERVICING INSTRUCTIONS

#### TO REPLACE THE FUSE

1. Unplug before changing fuses. Do not unplug by pulling on cord.
2. Slide open fuse access cover on top of attachment plug towards blades. (See diagram)
3. Remove fuses carefully. Turn plug over to empty fuse compartment.
4. To reduce the risk of fire, replace fuses with 3 Amp, 125 Volt fuses included in this set.
5. Make sure the fuses are properly placed in the fuse holder then close the fuse access slide to a closed position.
6. Do not replace the plug. The plug contains a safety device (fuse) that should not be removed. Do not use product if the plug is damaged.

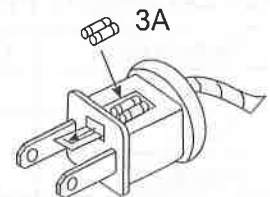

#### TO REPLACE THE BULBS

1. Remove plug from outlet. Do not unplug by pulling on the cord.
2. Remove the burned out bulb by pulling the bulb and plastic base straight out of lamp holders as shown in Fig.1.
3. Insert the spare bulb into the lamp holder in correct direction as shown in Fig.2.
4. To reduce the risk of overheating, replace burned-out bulbs promptly. Replace bulb with only 6 Volt, 0.48Watt super bright type bulb provided with this product.

#### If the bulb base of the replacement bulb does not fit in the string:

1. Straighten the two wires on the end of the original burned-out lamp and remove the lamp base.
2. Straighten the two wires on the end of the new lamp and remove the lamp base.
3. Insert the two wires of the new lamp into the two holes of the original lamp base and bend the wire upward.