

IMPORTANT SAFETY INSTRUCTIONS

When using electrical products, basic precautions should always be followed including the following:

- READ AND FOLLOW ALL SAFETY INSTRUCTIONS.**
- Do not use seasonal products outdoors unless marked suitable for indoor and outdoor use. When products are used in outdoor applications, connect the product to a Ground Fault Circuit Interrupting (GFCI) outlet.
- If one is not provided, contact a qualified electrician for proper installation.
- This seasonal use product is not intended for permanent installation or use.
- Do not mount or place near gas or electric heaters, fireplaces, candles or other similar sources of heat.
- Do not secure the wiring of the product with staples or nails, or place on sharp hooks or nails.
- Unplug the product when leaving the house, when retiring for the night, or if left unattended.
- This is an electric product not a toy. To avoid risk of fire, burns, personal injury and electric shock it should not be played with or placed where small children can reach it.
- Do not use this product for other than its intended use.
- Do not hang ornaments or other object from cord, wire, or light string.
- Do not cover the product or extension cords as this may damage the wire insulation.
- Do not cover the product with cloth, paper or any material not part of the product when in use.
- This product is equipped with push-in type lamps. Do not twist lamps.
- This product employs overload protection (fuse). A blown fuse indicates an overload or short-circuit situation. If the fuse blows, unplug the product from the outlet. Also unplug any additional strings or products that may be attached to the product. Replace the fuse as per the user servicing instructions (follow product marking for proper fuse rating) and check the product. If the replacement fuse blows, a short-circuit may be present and the product should be discarded.
- Read and follow all instructions that are on the product or provided with the product.

SAVE THESE INSTRUCTIONS

CAUTION:

This lighting string is rated 20.4 Watts (0.17Amps), do not overload. Connect other lighting strings or decorative bulbs end-to-end up to a maximum of 216 Watts (1.8 Amps) total.

If connecting to a lighting string that does not have a wattage (W) rating (found on the tag within 6 inches of the plug), calculate the wattage as follows: Multiply the current, which is on the tag-type tag by 120.

For example: Lighting string is rated 120V, 60Hz, 0.17Amps. $0.17A \times 120V = 20.4 \text{ Watts}$

TOTAL AMOUNT OF WATTAGE THAT CAN BE CONNECTED $216W - 20.4W = 195.6Watts$

 
USE AND CARE INSTRUCTIONS

- Before using or reusing, inspect product carefully. Discard any products that have cut, damaged, or frayed wire insulation or cords, cracks in the lampholders or enclosures, loose connections, or exposed copper wire.
- When storing the product, carefully remove the product from wherever it is placed, including trees, branches, or bushes, to avoid any undue strain or stress on the product conductors, connections, and wires.
- When not in use, store neatly in a cool, dry location protected from sunlight.

USER SERVICING INSTRUCTIONS

TO REPLACE THE FUSE

- Before changing fuses, make sure the set is unplugged. Grasp plug and remove from the receptacle or other outlet device. Do not unplug by pulling on cord.
- Open fuse cover. Slide open fuse access cover on top of attachment plug towards blades. (see diagram)
- Remove fuses carefully. Turn plug over to empty fuse compartment.
- Risk of fire. Replace fuses only with 3 Amp, 125 Volt fuses that are included in this set.
- Close fuse cover. Make sure the fuses are being properly seated in the fuse holder then push the fuse access door all the way back to completely cover the fuse holder
- Risk of fire. Do not replace attachment plug. Contains a safety device (fuse) that should not be removed. Discard product if the attachment plug is damaged.

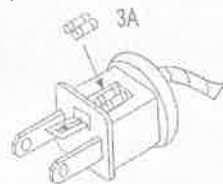

TO REPLACE THE LAMP

- Grasp plug and remove from the receptacle or other outlet device, do not unplug by pulling on cord.
- Push lamp and plastic base straight out of lampholder as shown in Figure (1).
- Insert the spare lamp into the lampholder in correct direction as shown in Figure (2).
- To reduce the risk of overheating, replace burned-out lamps promptly. Replace lamp with only 2.5 Volt, 40 Watt super bright type lamps provided with this product.

- If the lamp base of the replacement lamp does not fit in the string:
- Straighten the two wires on the end of the original burned-out lamp and remove the lamp base.
 - Straighten the two wires on the end of the new lamp and remove the lamp base.
 - Insert the two wires of the new lamp into the two holes of the original lamp base and bend the wires upward.


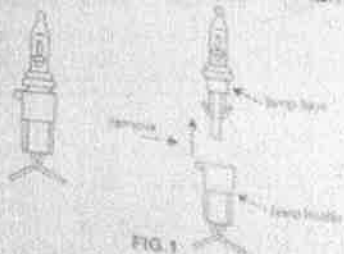 


FIG. 1

 1) Pull out lamp base from the string, leaving wires exposed.

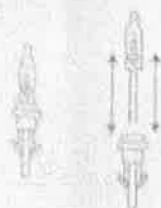

2) Remove old bulb from the string by unscrewing bulb cap.



FIG. 2

3) Push new bulb and base into socket. Do not force.

CAUTION:

To reduce the risk of fire and electrical shock:

- Do not install on trees having needles, leaves or branches covering of metal or materials that look like metal.
- Do not mount or support strings in a manner that can cut or damage wire insulation.

CAUTION:

- To reduce the risk of overheating replace burned-out lamps promptly. Use 2.5 volt, 0.43 watts **super bright** type lamps only.
- Risk of fire. This product contains lamp shunts which allow product to operate if one lamp burns out. Do not replace lamps with other than the spare lamps provided with this product.

DIRECTIONS:

Always test your light set before decorating. Make sure that all bulbs are firmly in their sockets. Never twist wires and this can cause part of the set to go out. If a bulb burns out, replace it promptly to prolong the life of the set. (See bulb replacement instructions).

WARNING:

Never leave product unattended while plugged in. Read important safety instructions cautions inside. This is decorative article, not a toy or intended for use by children. For adult use only. It should not be played with or placed where children can reach it.

FOR INDOOR AND OUTDOOR USE

120V 60Hz AC 0.17A 20.4Watts

MODEL NO: DLH-MNF-0060B

UL FILE NO: E310671

MADE IN CHINA

PACKAGE CONTENTS

Part	Description	Qty
A	Pre-lit Snowman	1 pc
B	Metal Easel	1 pc
C	Ground Anchor	4 pcs

REPLACEMENT PARTS LIST

Description	Quantity
Socket bulb	2 pcs
Wire	2 pcs
Plastic ties	10 pcs

ASSEMBLY DIAGRAM

