

INSTRUCTIONS

IMPORTANT SAFETY INSTRUCTIONS

When using electrical products, basic precautions should always be followed including the following:

READ AND FOLLOW ALL SAFETY INSTRUCTIONS

1. This product is intended for indoor use only.
2. This seasonal use product is not intended for permanent installation or use. It is for temporary (90 days max) installation or use only.
3. Do not mount or place near gas or electric heaters, fireplace, candles or other similar sources of heat.
4. Do not secure the wiring of this product with staples or nails or place on sharp hooks or nails.
5. Do not alter the construction of the wiring in anyway.
6. Do not let lamps rest on the supply cord or on any wire.
7. Unplug the product when leaving the house, retiring for the night, or if left unattended.
8. This is an electric product-not a toy! To avoid the risk of burns, personal injury and electric shock it should not be played with or placed where small children can reach it.
9. Do not use this product for anything other than its intended use.
10. Do not hang ornaments or other objects from the cord, wire, or light string.
11. Do not close doors or windows on the product or extension cords as this may damage the wire insulation.
12. Do not cover the product with cloth, paper or any material not part of the product when in use.
13. Do not mount or support strings in a manner that can cut or damage the wire insulation.

SAVE THESE INSTRUCTIONS

USE AND CARE INSTRUCTIONS

1. Before using or reusing, inspect the product carefully. Discard any products that have cut, damaged or frayed wire insulation or cords, cracks in the lamp holders or enclosures, loose connections, or exposed copper wire.
2. When storing the product, carefully remove the product from wherever it was placed including tree, branches or bushes to avoid undue strain and stress on the product conductors, connections and wires.
3. When not in use, store neatly in a cool dry location protected from sunlight.

CAUTION:

This product is packed with the UL listed indoor use External Power Supply.
Only this included external power supply may be used with this product.
Input: 120V AC 60Hz, Output: 4.5V DC / 0.6A 2.7W.
WARNING: Risk of electric Shock. Mount the unit at a height greater than 0.3M from the ground surface.

CAUTION:

1. Read and follow all instructions that are on the product or provided with the product.
2. Do not use an extension cord.
3. Do not install or use within 10 feet of a pool.
4. Do not use in a bathroom.
5. Lamps cannot be removed and replaced.

CAUTION:

Lights or LEDs shine directly into the eyes.
Do not put finger or object into the gap between rotated hemisphere and main body.

INDOOR USE ONLY
120V 60Hz 0.026A 1.5Watts
MODEL NO: 16-20339
MADE IN CHINA


CAUTION: This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) the device must accept any interference received, including interference that may cause undesired operation.

CAUTION: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures.

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

ASSEMBLY DIAGRAM:

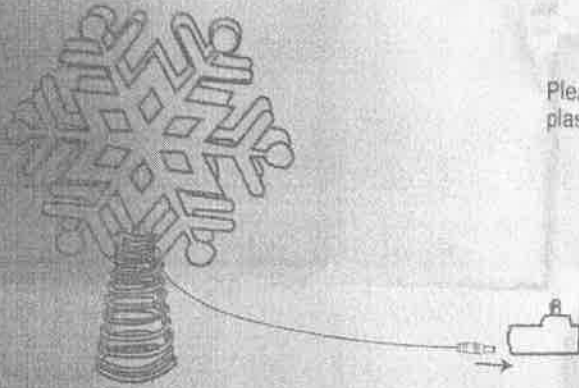

Please mount and fasten to the tree top with provided plastic ties for the sake of stability and safety.

PACKAGE CONTENTS

Part	Description	Quantity
A	LED Projector snowflake tree top	1 pc
B	Adapter	1 pc
C	Plastic ties	5 pcs

ASSEMBLY INSTRUCTION:

1. Carefully remove all packing materials.
2. Place the snowflake tree top on the tree top firmly as noted above.
3. Connect the cord to the provided adapter and plug the adapter into a standard 120V AC outlet to light up the LED projector at the tree top.

Made in China