

52 INCH 100 Lighted Snowman

IMPORTANT SAFETY INSTRUCTION

When using electrical products, basic precautions should always be followed including the following :

READ AND FOLLOW ALL SAFETY INSTRUCTIONS

1. Do not use seasonal products outdoors unless marked suitable for indoor & outdoor use. When products are used outside, connect the product to a Ground Fault Circuit Interrupter (GFCI) outlet. If one is not provided, contact a qualified electrician for proper installation.
2. This seasonal use product is not intended for permanent installation or use.
3. Do not mount or place near gas or electric heaters, fireplaces, candles or other similar sources of heat.
4. Do not secure the wiring of the product with staples, nails or place on sharp hooks.
5. Do not let lamps rest on the supply cord or on any wire.
6. Unplug the product when leaving the house, retiring for the night, or if left unattended.
7. This is an electric product-not a toy! To avoid risk of fire burns, personal injury and electric shock, it should not be played with or placed where small children can reach it.
8. Do not use this product for other than its intended use.
9. Do not hang ornaments or other objects from cord, wire or light string.
10. Do not close doors or windows on the product or extension cords as this may damage the wire insulation.
11. Do not cover the product with cloth, paper or any material not part of the product when in use.
12. This product is equipped with push-in type bulbs. Do not twist wire or bulbs.
13. This product contains an overload protection fuses. A blown fuse indicates an overload or short-circuit situation. If the fuse blows, unplug the product from the outlet. Also unplug any additional strings or products that may be attached to the product. Replace the fuse as per the user instructions.
14. Read and follow all instructions that are provided with the product.

SAVE THESE INSTRUCTIONS

CAUTION:

This lighting string is rated 40.8Watts (0.34Amps), do not overload. Connect other lighting strings or decorative outfits end-to-end up to a maximum of 216 Watts (1.8 Amps) total.

If connecting to a lighting string that does not have a wattage (W) rating (found on the tag within 6 inches of the plug), calculate the wattage as follows: Multiply the current, which is on the flag-type tag by 120.

For example: Lighting string is rated 120V, 60Hz, 0.34Amps. $0.34 \times 120 = 40.8\text{Watts}$

TOTAL AMOUNT OF WATTAGE THAT CAN BE CONNECTED $216\text{W} - 40.8\text{W} = 175.2\text{Watts}$


USE AND CARE INSTRUCTIONS

1. Before using, inspect product carefully. Do not use if product has damages or frayed cords, cracks in the lamp holders or enclosures, loose connections or exposed copper wire.
2. When storing the product, carefully remove any debris from the product, including tree branches to avoid any undue strain or stress on the product conductors, connections and wires.
3. When not in use, store neatly in a cool dry location protected from sunlight.

USER SERVICING INSTRUCTIONS

TO REPLACE THE FUSE

1. Unplug before changing fuses. Do not unplug by pulling on cord.
2. Slide open fuse access cover on top of attachment plug towards blades. (See diagram)
3. Remove fuses carefully. Turn plug over to empty fuse compartment.
4. To reduce the risk of fire, replace fuses with 3 Amp, 125 Volt fuses included in this set.
5. Make sure the fuses are properly placed in the fuse holder then close the fuse access slide to a closed position.
6. Do not replace the plug. The plug contains a safety device (fuse) that should not be removed. Do not use product if the plug is damaged.

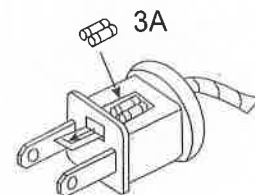


TO REPLACE THE BULBS

1. Remove plug from outlet. Do not unplug by pulling on the cord.
2. Remove the burned out bulb by pulling the bulb and plastic base straight out of lamp holders as shown in Fig.1.
3. Insert the spare bulb into the lamp holder in correct direction as shown in Fig.2.
4. To reduce the risk of overheating, replace burned-out bulbs promptly. Replace bulb with only 2.5 Volt, 0.43Watt super bright type bulb provided with this product.

If the bulb base of the replacement bulb does not fit the string:

1. Straighten the two wires on the end of the original burned-out lamp and remove the lamp base.
2. Straighten the two wires on the end of the new lamp and remove the lamp base.
3. Insert the two wires of the new lamp into the two holes of the original lamp base and bend the wire upward.

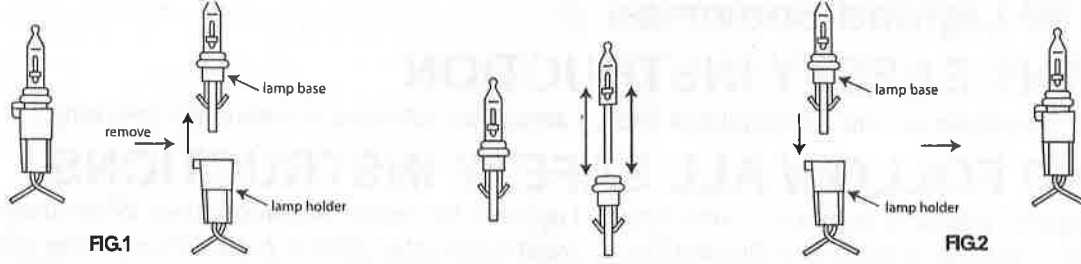

(1) Hold bulb by its base, then pull straight out of socket.

(2) Remove old bulb from its base by straightening bulb wires.

(3) Insert wires of new bulb into holes provided and bend wires upward.

(4) Push new bulb and base into socket. Do not twist.

CAUTION:

To reduce the risk of fire and electrical shock:

1. Do not mount or support strings in a manner that can cut or damage wire insulation.

CAUTION:

1. To reduce the risk of overheating, replace burned-out bulbs promptly. Use 2.5 volt, 0.43 watts super bright type bulbs only.
2. This product contains lamp shunts which allow product to operate if one lamp burns out. Do not replace bulbs with other than the spare bulbs provided with this product.

DIRECTION:

Always test your light set before decorating. Make sure that all bulbs are firmly in their sockets. Never twist bulbs since this can cause part of the set to go out. If a bulb burns out, replace it promptly to prolong the life of other bulbs. (See bulb replacement instructions)

ATTENTION:

Due to the nature of the material used, loss of some glitters material during shipment and assembly is to be expected. Please dispose of debris and keep out of reach of children. Its beauty will not be diminished by the amount of debris.

WARNING:

Read all caution and safety instructions. This is a decorative article for adult use only, not a toy or intended for use by children. It should not be played with or placed where children can reach it. Never leave product unattended while plugged in.

FOR INDOOR AND OUTDOOR USE

120V 60Hz AC 0.34 A 40.8 Watts


MODEL NO.: DLH-MNP-0090E

UL FILE NO.:E310671

MADE IN CHINA

ASSEMBLY DIAGRAM:

100 LIGHTED SNOWMAN

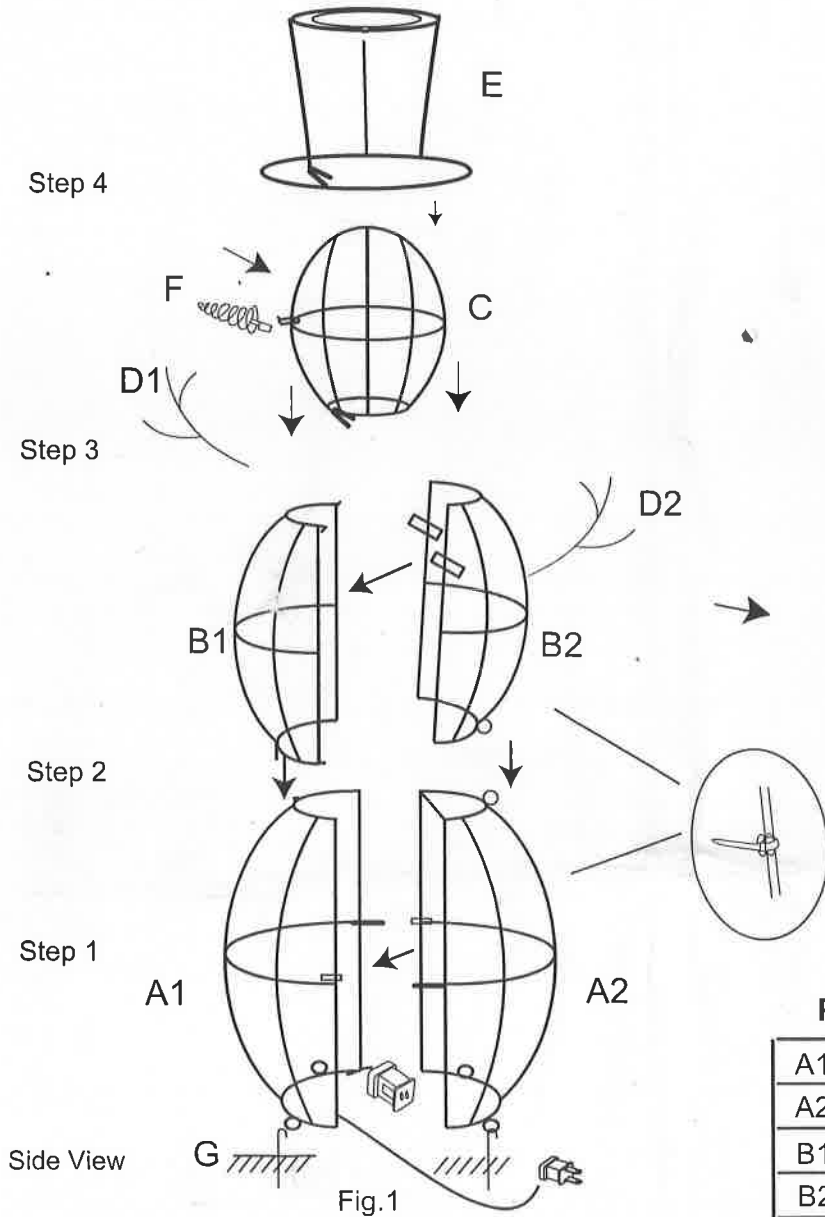

PACKAGE CONTENTS

A1	Lower front body	1pc
A2	Lower back body	1pc
B1	Upper front body	1pc
B2	Upper back body	1pc
C	Head	1pc
D1	Right hand	1pc
D2	Left hand	1pc
E	Hat	1pc
F	Nose	1pc
G	Fixing hook	4pcs

REPLACEMENT PARTS LIST

Description	Quantity
Spare bulb	4 pcs
Fuse	4 pcs
Plastic tie	20pcs

- Step 1: Combine A1 to A2 to become one by inserting the peg from one side to the hole on another side. Use the cable ties into loop to secure both side firmly.
- Step 2: Combine B1 to B2 to the lower side of the body of A1 and A2.
- Step 3: Insert the head (C) to the body by hooking on the frame of B1 & B2.
- Step 4: Hook the hat (E) to the head (C) and insert the hands (D1,D2) and nose (F) to the body of B1 & B2, then fasten the bow to the front body.
- Step 5: Make sure the two 50 mini bulbs lighted chains interconnected together and plug in the main plug to the 120V AC power outlet to light up the item.
- Step 6. When displaying outdoor, use the fixing hooks to fix item firmly on the ground.

