 



# 52inch Lighted Rattan Angel with 100 mini light chain

## ASSEMBLY DIAGRAM

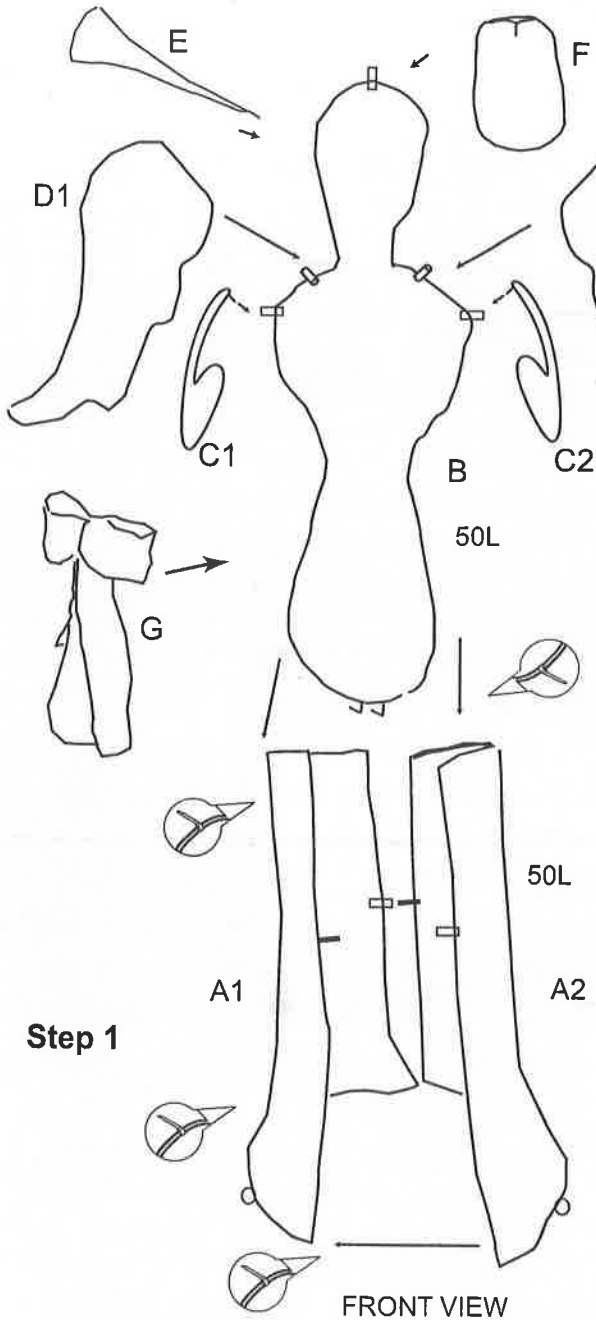

### Step 1

 FRONT VIEW

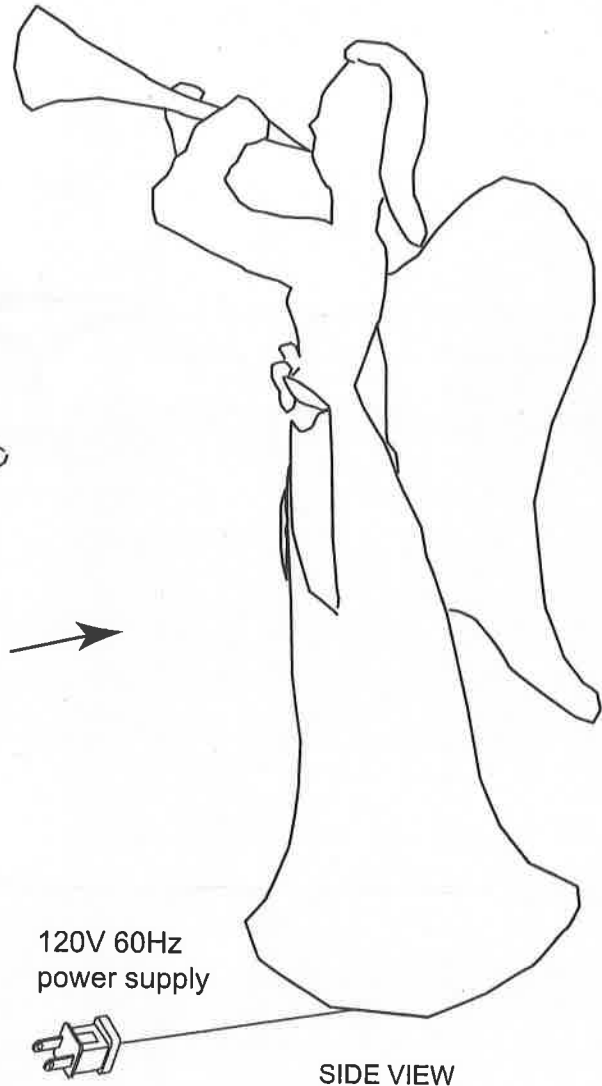

SIDE VIEW

### Step 1

1. Connect the lower Right body(A1) and the lower latter body(A2) by latching the peg to the slot on the metal frame at the bottom. Use provided plastic ties to fix them firmly.
2. Insert the upper Body to the lower body by hooking to the frame (as shown in Fig) . Use provided plastic ties to fix them firmly.

### Step 2:

1. Insert the both hands(C1+C2) to the body. Insert both Wings (E1+E2) to the body. Insert the Trumpet, Halo and Bow to the body.

### Step 3:

1. Both the 50 light chain are pre-installed in the metal frame, and make sure they are interconnected.
2. Plug in the main plug to 120V 60Hz Outlet to light up the item

Fixing hooks are also provided to fix the item firmly when outdoor display.

## PACKAGE CONTENTS

A1	Lower Right Body	1 pc
A2	Lower Left Body	1 pc
B	Upper Body	1 pc
C	Hands	2 pcs
D	Wings	2 pcs
E	Trumpet	1 pc
F	Halo	1 pc
G	Bow	1 pc
H	Fixing Hooks	4 pcs



## IMPORTANT SAFETY INSTRUCTIONS

When using electrical products, basic precautions should always be followed including the following:

- a) **READ AND FOLLOW ALL SAFETY INSTRUCTIONS.**
- b) Do not use seasonal products outdoors unless marked suitable for indoor and outdoor use. When products are used in outdoor applications, connect the product to a Ground Fault Circuit Interrupting (GFCI) outlet. If one is not provided, contact a qualified electrician for proper installation.
- c) This seasonal use product is not intended for permanent installation or use.
- d) Do not mount or place near gas or electric heaters, fireplaces, candles or other similar sources of heat.
- e) Do not secure the wiring of the product with staples or nails or place on sharp hooks or nails.
- f) Do not let lamps rest on the supply cord or on any wire.
- g) Unplug the product when leaving the house, when retiring for the night, or if left unattended.
- h) This is an electric product-not a toy! To avoid risk of fire, burns, personal injury and electric shock it should not be played with or placed where small children can reach it.
- i) Do not use this product for other than its intended use.
- j) Do not hang ornaments or other object from cord, wire, or light string.
- k) Do not close doors or windows on the product or extension cords as this may damage the wire insulation.
- l) Do not cover the product with cloth, paper or any material not part of the product when in use.
- m) This product is equipped with push-in type lamps. Do not twist lamps.
- n) This product employs overload protection(fuse). A blown fuse indicates an overload or short-circuit situation. If the fuse blows, unplug the product from the outlet. Also unplug any additional strings or products that may be attached to the product. Replace the fuse as per the user servicing instructions(follow product marking for proper fuse rating)and check the product. If the replacement fuse blows, a short-circuit may be present and the product should be discarded.
- o) Read and follow all instructions that are on the product or provided with the product.

## SAVE THESE INSTRUCTIONS

### CAUTION:

This lighting string is rated 40.8 Watts ( 0.34Amps), do not overload. Connect other lighting strings or decorative outfits end-to-end up to a maximum of 216 Watts (1.8 Amps) total.

If connecting to a lighting string that does not have a wattage (W) rating (found on the tag within 6 inches of the plug), calculate the wattage as follows: Multiply the current, which is on the flag-type tag by 120.

 
For example: Lighting string is rated 120V, 60Hz, 0.34Amps.  $0.34 \times 120 = 40.8 \text{ Watts}$   
TOTAL AMOUNT OF WATTAGE THAT CAN BE CONNECTED  $216 \text{ W} - 40.8 \text{ W} = 175.2 \text{ W}$

### USE AND CARE INSTRUCTIONS

- a) Before using or reusing, inspect product carefully. Discard any products that have cut, damaged, or frayed wire insulation or cords, cracks in the lampholders or enclosures, loose connections ,or exposed copper wire.
- b) When storing the product, carefully remove the product from wherever it is placed, including trees, branches, or bushes, to avoid any undue strain or stress on the product conductors, connections, and wires.
- c) When not in use, store neatly in a cool, dry location protected from sunlight.

### USER SERVICING INSTRUCTIONS TO REPLACE THE FUSE

- a) Before changing fuses, make sure the set is unplugged. Grasp plug and remove from the receptacle or other outlet device. Do not unplug by pulling on cord.
- b) Open fuse cover. Slide open fuse access cover on top of attachment plug towards blades.(see diagram)
- c) Remove fuses carefully. Turn plug over to empty fuse compartment.
- d) Risk of fire. Replace fuses only with 3 Amp, 125 Volt fuses that are included in this set.
- e) Close fuse cover. Make sure the fuses are being properly seated in the fuse holder then push the fuse access door all the way back to completely cover the fuse holder
- f) Risk of fire. Do not replace attachment plug. Contains a safety device (fuse) that should not be removed. Discard product if the attachment plug is damaged.

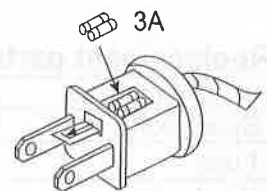


### TO REPLACE THE LAMP

- a) Grasp plug and remove from the receptacle or other outlet device, do not unplug by pulling on cord.
- b) Pull lamp and plastic base out of lampholder as shown in Figure (1).
- c) Insert the spare lamp into the lampholder as shown in figure (4).
- d) To reduce the risk of overheating, replace burned-out lamps promptly. Replace lamp with only 2.5Volt (0.43 Watt) super bright type lamps provided with this product.

**If the lamp base of the replacement lamp does not fit in the string, change the lamp base as follow:**

 - a) Straighten the two wires on the end of the original burned-out lamp and remove the lamp base.
- b) Straighten the two wires on the end of the new lamp and remove the lamp base.
- c) Insert the two wires of the new lamp into the two holes of the original lamp base and bend the wires upward as shown in figure(2) & (3)

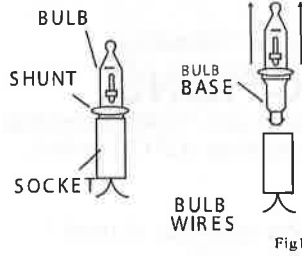

(1) Hold bulb by its base, then pull straight out of socket.



Fig2

(2) Remove old bulb from its base by straightening bulb wires.

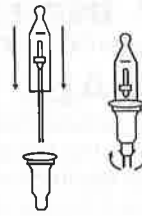 


Fig3

(3) Insert wires of new bulb into holes provided in the base and bend wires upward.

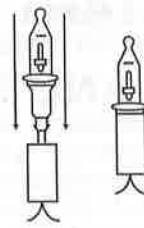 


Fig4

(4) Push new bulb and base into socket. Do not twist.

## CAUTION:

To reduce the risk of fire and electrical shock:

- Do not install on trees having needles, leaves or branches covering of metal or materials that look like metal .
- Do not mount or support strings in a manner that can cut or damage wire insulation
- To reduce the risk of overheating replace burned-out lamps promptly. Use 2.5 volt, 0.43 watts super bright type lamps only
- Risk of fire. This product contains lamp shunts which allow product to operate if one lamp burns out. Do not replace lamps with other than the spare lamps provided with this product.

## DIRECTIONS:

Always test your light set before decorating. Make sure that all bulbs are firmly in their sockets. Never twist bulbs since this can cause part of the set to go out. If a bulb burns out, replace it promptly to prolong the life of other bulbs. (See bulb replacement instructions).

## ATTENTION:

Due to the nature of the material used, loss of some glitters material during shipment and assembly is to be expected. Please dispose of debris and keep out of reach of children. Its beauty will not be diminished by the amount of debris.

## WARNING:

Never leave product unattended while plugged in. Read important safety instructions cautions inside. This is decorative article, not a toy or intended for use by children. For adult use only. It should not be played with or placed where children can reach it.

FOR INDOOR AND OUTDOOR USE

120V 60Hz AC 0.34A 40.8Watt

MODEL No: DLH-MNN-0029E

UL FILE NO.: E310671

MADE IN CHINA

### Replacement parts included

Description	Quantity
Spare bulb	4pcs
Fuse	4pcs
Plastic ties	20pcs