

# S/4 PATHWAY DREIDEL MARKERS IMPORTANT SAFETY INSTRUCTIONS

When using electrical products, basic precautions should always be followed including the following:

## READ AND FOLLOW ALL SAFETY INSTRUCTIONS

1. Do not use seasonal products outdoors unless marked suitable for indoor & outdoor use. When products are used outside, connect the product to a Ground Fault Circuit Interrupter (GFCI) outlet. If one is not provided, contact a qualified electrician for proper installation.
2. This seasonal use product is not intended for permanent installation or use.
3. Do not mount or place near gas or electric heaters, fireplaces, candles or other similar sources of heat.
4. Do not secure the wiring of the product with staples or nails or place on sharp hooks or nails.
5. Do not let lamps rest on the supply cord or on any wire.
6. Unplug the product when leaving the house, when retiring for the night, or if left unattended.
7. This is an electric product not a toy! To avoid risk of fire burns, personal injury and electric shock, it should not be played with or placed where small children can reach it.
8. Do not use this product for other than its intended use.
9. Do not hang ornaments or other object from cord, wire, or light string.
10. Do not close doors or windows on the product or extension cords as this may damage the wire insulation.
11. Do not cover the product with cloth, paper or any material not part of the product when in use.
12. This product is equipped with push-in type bulbs. Do not twist wire or bulbs.
13. This product contains an overload protection fuses. A blown fuse indicates an overload or short-circuit situation. If the fuse blows, unplug the product from the outlet. Also unplug any additional strings or products that may be attached to the product. Replace the fuse as per the user instructions.
14. Read and follow all instructions that are provided with the product.

## SAVE THESE INSTRUCTIONS

### CAUTION:

This lighting string is rated 14.4 Watts (0.12Amps), do not overload. Connect other lighting strings or decorative outfits end-to-end up to a maximum of 216 Watts (1.8 Amps) total.

If connecting to a lighting string that does not have a wattage (W) rating (found on the tag within 6 inches of the plug),

calculate the wattage as follows: Multiply the current, which is on the flag-type tag by 120.

For example: lighting string is rated 120V, 60Hz, 0.12Amps.  $0.12 \times 120 = 14.4 \text{ Watts}$ .

**TOTAL AMOUNT OF WATTAGE THAT CAN BE CONNECTED  $216W - 14.4W = 201.6W$**

 
### USE AND CARE INSTRUCTIONS

1. Before using, inspect product carefully. Do not use if product has damaged, or frayed cords, cracked in the lamp holders or enclosures, loose connections, or exposed copper wire.
2. When using the product, carefully remove any debris from the product, including tree, branches, to avoid any undue strain or stress on the product conductors, connections, and wires.
3. When not in use, store neatly in a cool, dry location protected from sunlight.

### USER SERVICING INSTRUCTIONS

#### TO REPLACE THE FUSE

1. Unplug before changing fuses. Do not unplug by pulling on cord.
2. Slide open fuse access cover on top of attachment plug towards blades. (See diagram)
3. Remove fuses carefully. Turn plug over to empty fuse compartment.
4. To reduce the risk of fire, replace fuses with 3 Amp, 125 Volt fuses included in this set.
5. Make sure the fuses are properly placed in the fuse holder then close the fuse access slide to a closed position.
6. Do not replace the plug. The plug contains a safety device (fuse) that should not be removed. Do not use product if the plug is damaged.

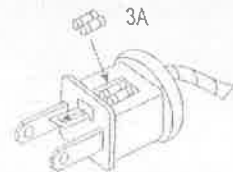

#### TO REPLACE THE LAMP

1. Grasp plug and remove from the receptacle or other outlet device, do not unplug by pulling on cord.
2. Pull lamp and plastic base straight out of lampholder as shown in Fig (1).
3. Insert the spare lamp into the lampholder in correct direction as shown in Fig (2).
4. To reduce the risk of overheating, replace burned-out lamps promptly. Replace lamp with only 3.5 Volt, 42Watt super bright type lamps provided with this product.

#### THE BULB BASE OF THE REPLACEMENT BULB DOES NOT FIT IN THE STRING:

1. Strip the two wires on the end of the original burned-out lamp and remove the lamp base.
2. Strip the two wires on the end of the new lamp and remove the lamp base.
3. Insert the two wires of the new lamp into the two holes of the original lamp base and bend the wire upward.


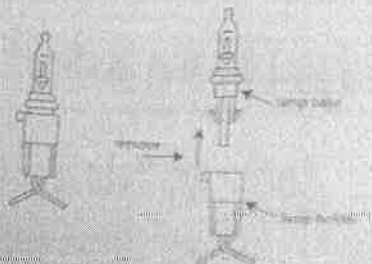 


FIG. 1

 (1) Hold bulb by its base, then pull straight out of socket.

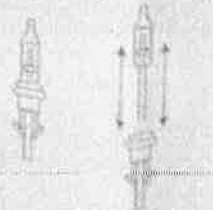

(2) Remove old bulb from its base by straightening bulb wires.

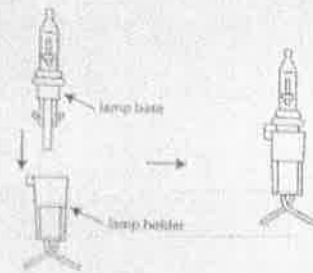 


FIG. 2

(3) Insert wires of new bulb into holes provided and bend wires upward.

(4) Push new bulb and base into socket. Do not twist.

### CAUTION:

To reduce the risk of fire and electrical shock:

1. Do not mount or support strings in a manner that can cut or damage wire insulation.

### CAUTION:

To reduce the risk of overheating, replace burned-out bulbs promptly. Use 3.5 volt, 0.42 watts super bright type bulbs.

Do not use any other lamp shunts which allow product to operate if one lamp burns out. Do not replace bulbs with other than the spare bulbs provided with this product.

### DIRECTION:

Always set up product before decorating. Make sure that all bulbs are firmly in their sockets. Never twist bulbs. Always turn off power to the set to go out. If a bulb burns out, replace it promptly to prolong the life of other bulbs. (See important instructions)

### ATTENTION:

Due to the material used, loss of some material during shipment and assembly is to be expected. Always use caution and keep out of reach of children.

### WARNING:

Never leave product unattended while plugged in. Read important safety instructions cautions inside. This is not a toy, not a toy or intended for use by children. For adult use only. It should not be played with or used where children can reach it.

### INDOOR AND OUTDOOR USE

24V DC, AC 0.12A, 14.4Watts

MODEL NO. Q18-MNP-0031B

DO NOT EXCEPT

### PACKAGE CONTENTS

Ref.	Description	Quantity
1	Dreidel	4pcs
2	Round stake	4pcs

### REPLACEMENT PARTS LIST

Description	Quantity
Spare bulb	2pcs
Glue	2pcs
Elastic ties	10pcs

### S/4 PATHWAY DREIDEL MARKERS ASSEMBLY DIAGRAM

