 
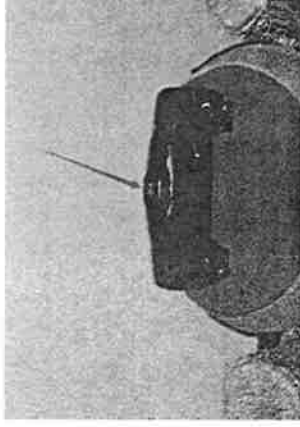 


Collapsible Nutcracker INSTRUCTION MANUAL


Thank you for purchasing this collapsible product with Moving and Music. Please read the instructions carefully before use to ensure satisfactory operation of this product.

STANDING UP:

- Plastic nutcracker product packing with head K/D and body down.
- Carefully remove product from packaging and unpack all contents
- Place on a stable, secure and flat surface.
- Take out Nutcracker's head from case and open the package
- Press the button and Pull it, The product will stand up, The collapsible structure same as draw-bar box, Easy to operation,

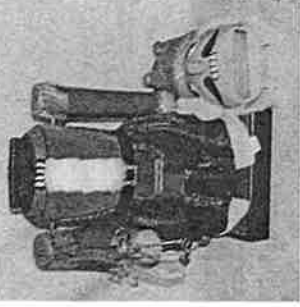


- Put the Nutcracker's head on shoulder. The have two stick to connect Santa head and body.

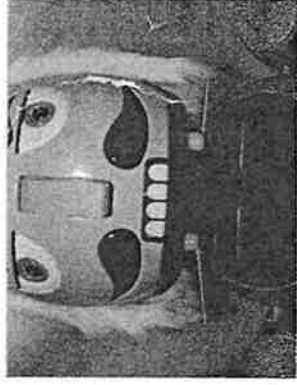

OPERATED THIS PRODUCT:

- To operate, plug in the adaptor (DC 9V, 1.0A and included) into the plug near the heel of the figure and connect to a power source. The figure will activated,

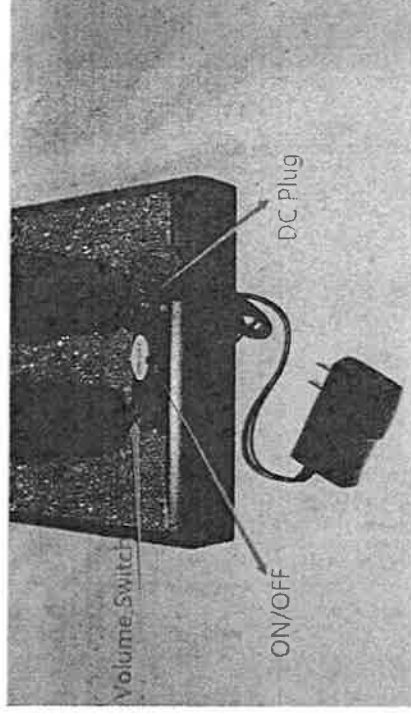

- With arm and lips moving and Jingle Bells music .And will stop moving and singing when the music finishes.
- It is control by both light sensor and Sound sensor
- The figure will reactivate when a person walks pass with enough light brightness . If the light brightness not enough and you can reactivate It by Sound sensor too.

FOR SAFETY'S SAKE

- It is very important that this product is **NEVER DIRECTLY** connected to the mains supply.
- Do not damage the insulation of cable.
- Do not lay the cable under carpet or where it can be damaged.
- Ensure that cables are fully unwound and sited where they will not become damaged or present a tripping hazard.
- Do not connect this product electrically to any other product.
- Do not connect the product to the mains supply while it is in the packaging.
- Ensure table top transformers are positioned on flat, stable, heat resistant surfaces.
- Unplug the product when leaving the house, when retiring for the night or if left unattended
- Do not overload wall sockets. Use different sockets around the house to plug in multiple lights to balance the load.
- For decorative purposes only. Not suitable for use in play by children
- Warning: Do not try to change or modify the structure and equipment of the product.
- For indoor use only.
- Please retain this information for future reference.

CE

