

INFLATABLE SANTA

INDOOR USE ONLY

Thank you for purchasing this product. Please read the instructions and warnings carefully before use to ensure safe and satisfactory operation.

This product is for indoor use only, keeping the temperature above Minus 15 degrees Celsius for use.
INSTRUCTIONS FOR USE

- Carefully remove from packaging taking care not to damage or twist the wires
- Place item on a flat stable surface
- Make sure that the cable is completely unravelled and that there are no snags in the cable.
- To operate, plug the transformer into mains supply, indoors. The on/off switch is located near the jack plug socket

NOTE: YOUR FIGURE MAY BE DIFFERENT THAN THE ONE SHOWN FOR DEMONSTRATION.

ASSEMBLY

1. Carefully remove the product from the box. Do not forcefully pull out the product as this may cause damage. Please place on flat surface for inflation. Please note: the air stopper is located at the back end of the product above the waist belt.

2. Locate the inflation power plug (back of the right shoe) and place into a wall socket location (ensure the wall socket is inside only). Turn on the wall socket switch and then turn on the power button of the product (white switch located at the back of the right shoe). Please note other power cable is for animation.

3. The inflating process will take approximately 3 - 4 minutes. Please ensure to guide the Santa upwards as the body fills with air. Once filled with air, the inflating motor will cease automatically.



4. To attach the head, line up the two poles with the slots and push carefully into place.

5. If the air pressure starts to reduce, the sensor will identify this and automatically start to re-inflate the Santa, as long as the power switch is still turned on.

6. The second power cord is for the Animation of the Santa. Insert the plug into a wall socket and switch on at the wall socket. There is a switch located on the left hand of the Santa, press this to begin animation!



DISASSEMBLY:

Carefully switch off all power at both sources and pull the power cords from the wall sockets. Open the air stopper and slowly let deflate, guiding the Santa down. Place Santa away in indoor only dry area, away from water source.

IMPORTANT:

* AIR PUMP POWER SUPPLY MUST BE AC 230V-240V.

* Do not cut off the air pump inlet port.

* Do not use or store outside or near water source.

* Keep small particles such as sand and stones away from air port as it may cause damage to product.

* Ensure children do not touch the air pump.