


NORTHLIGHT™

IMPORTANT: Read all instructions before using

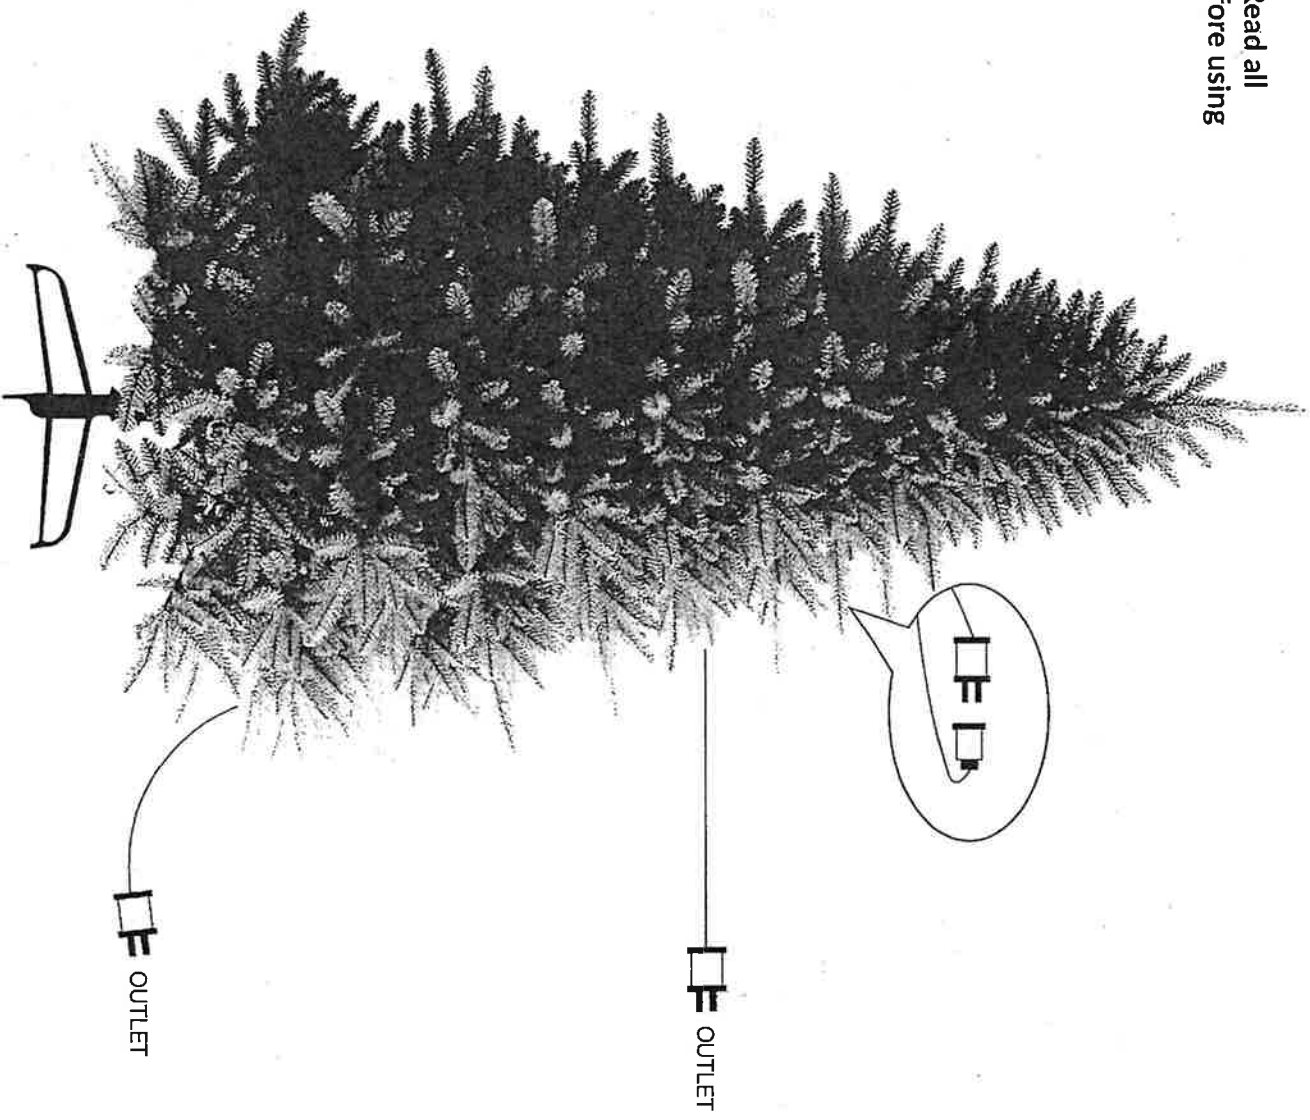

CONNECTING AND PLUGGING IN YOUR TREE LIGHTS

FOR ALL PRE-LIT TREES: Connect the plug from the top section of the tree to the plug from the section below it.

FOR TREES WITH 500 BULBS OR LESS:

Place the plug with the red label into an electrical outlet.

FOR TREES WITH 501-1,000 BULBS:

Your tree should have two plugs marked with red labels. Insert each plug into separate electrical outlets.

FOR TREES WITH 1,001 BULBS OR MORE:


Your tree should have three plugs marked with red labels. Each plug should be inserted into separate electrical outlets.

AN ELECTRICAL POWER STRIP IS RECOMMENDED.

HOW TO INSTALL REPLACEMENT BULBS

Use the replacement bulbs provided with your tree or ensure that your replacement bulb is identical in size, type and voltage to the original bulb.


1. Make sure your tree lights are not plugged into an electrical outlet or power strip.
2. Firmly grip the plastic base of the light you wish to replace.
3. Pull the lamp and plastic base straight out of the lampholder. Do not twist.
4. Insert the the 2.5 volt replacement bulb by pushing it straight into the lampholder, without twisting.

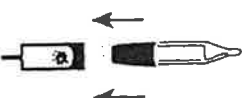

HOW TO REPLACE THE FUSE

Use the replacement fuses provided with your tree or ensure that your replacement fuse is identical in size, type and amperage/voltage to the original fuse.

1. Open the fuse chamber on top of the electrical plug by sliding the access cover toward the plug prongs.
2. Turn over the fuse holder and carefully remove the blown fuse.
3. Insert the spare fuse provided with your product. To avoid risk of fire, replace the fuse only with a 3 Amp 125 volt fuse.
4. Close the fuse chamber by sliding the access cover back toward the cord end of the plug.

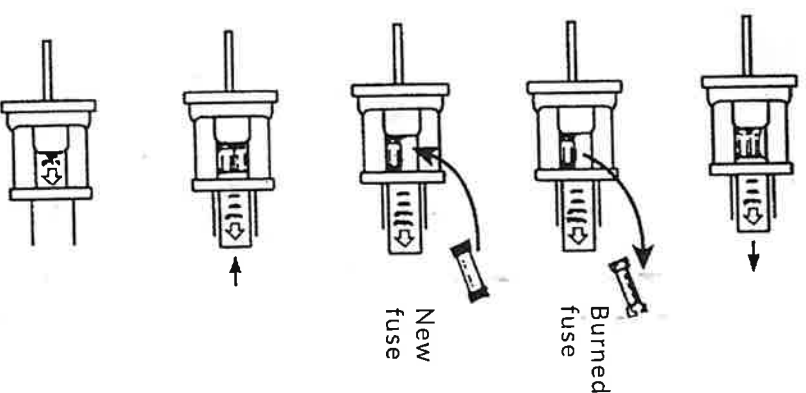

5. **DO NOT** replace the attachment plug. It contains a safety device (fuse) that should not be removed. Discard the product if the attachment plug is damaged.