


Assembly Instruction

ADIRONDACK CHAIR-WHITE

ITEM# PW-AD01

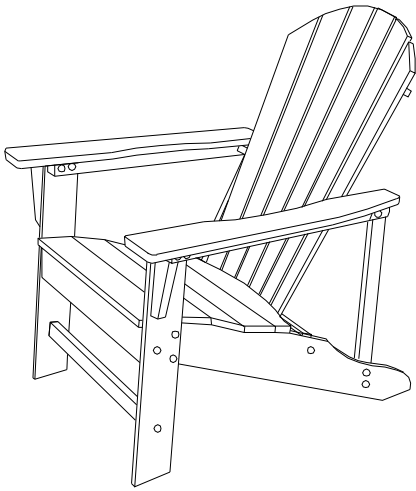

Note: Do not tighten all screws until last step

A (1pc)		B (1pc)	
C (1pc)	D (1pc)	E (1pc)	F (1pc)
G (1pc)	H (2pcs)	I (14sets)	J (2pcs)
K (2pcs)	L (2pcs)	TOOLS & MATERIALS NEEDED	
		10mm	
		Power drill is recommended	

