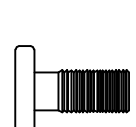
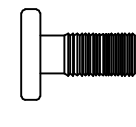
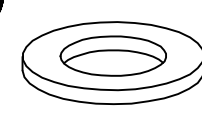
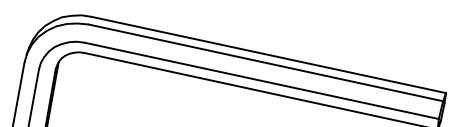
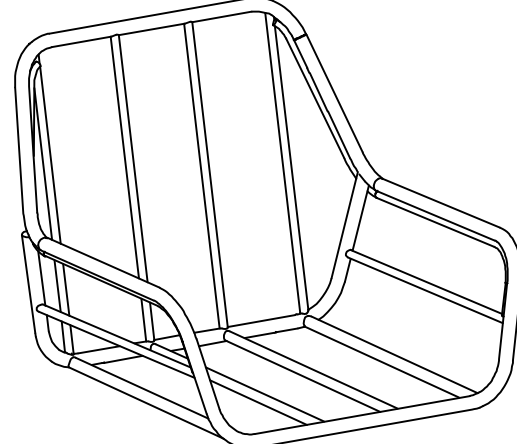
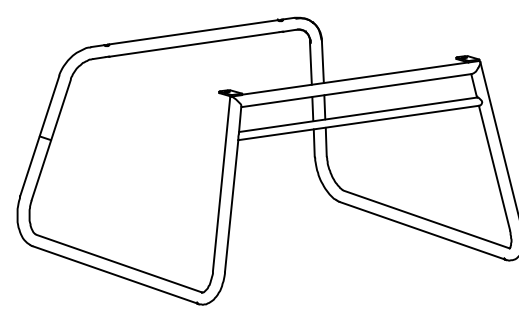
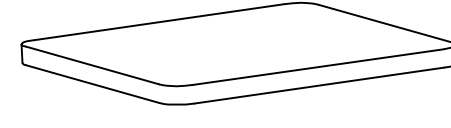
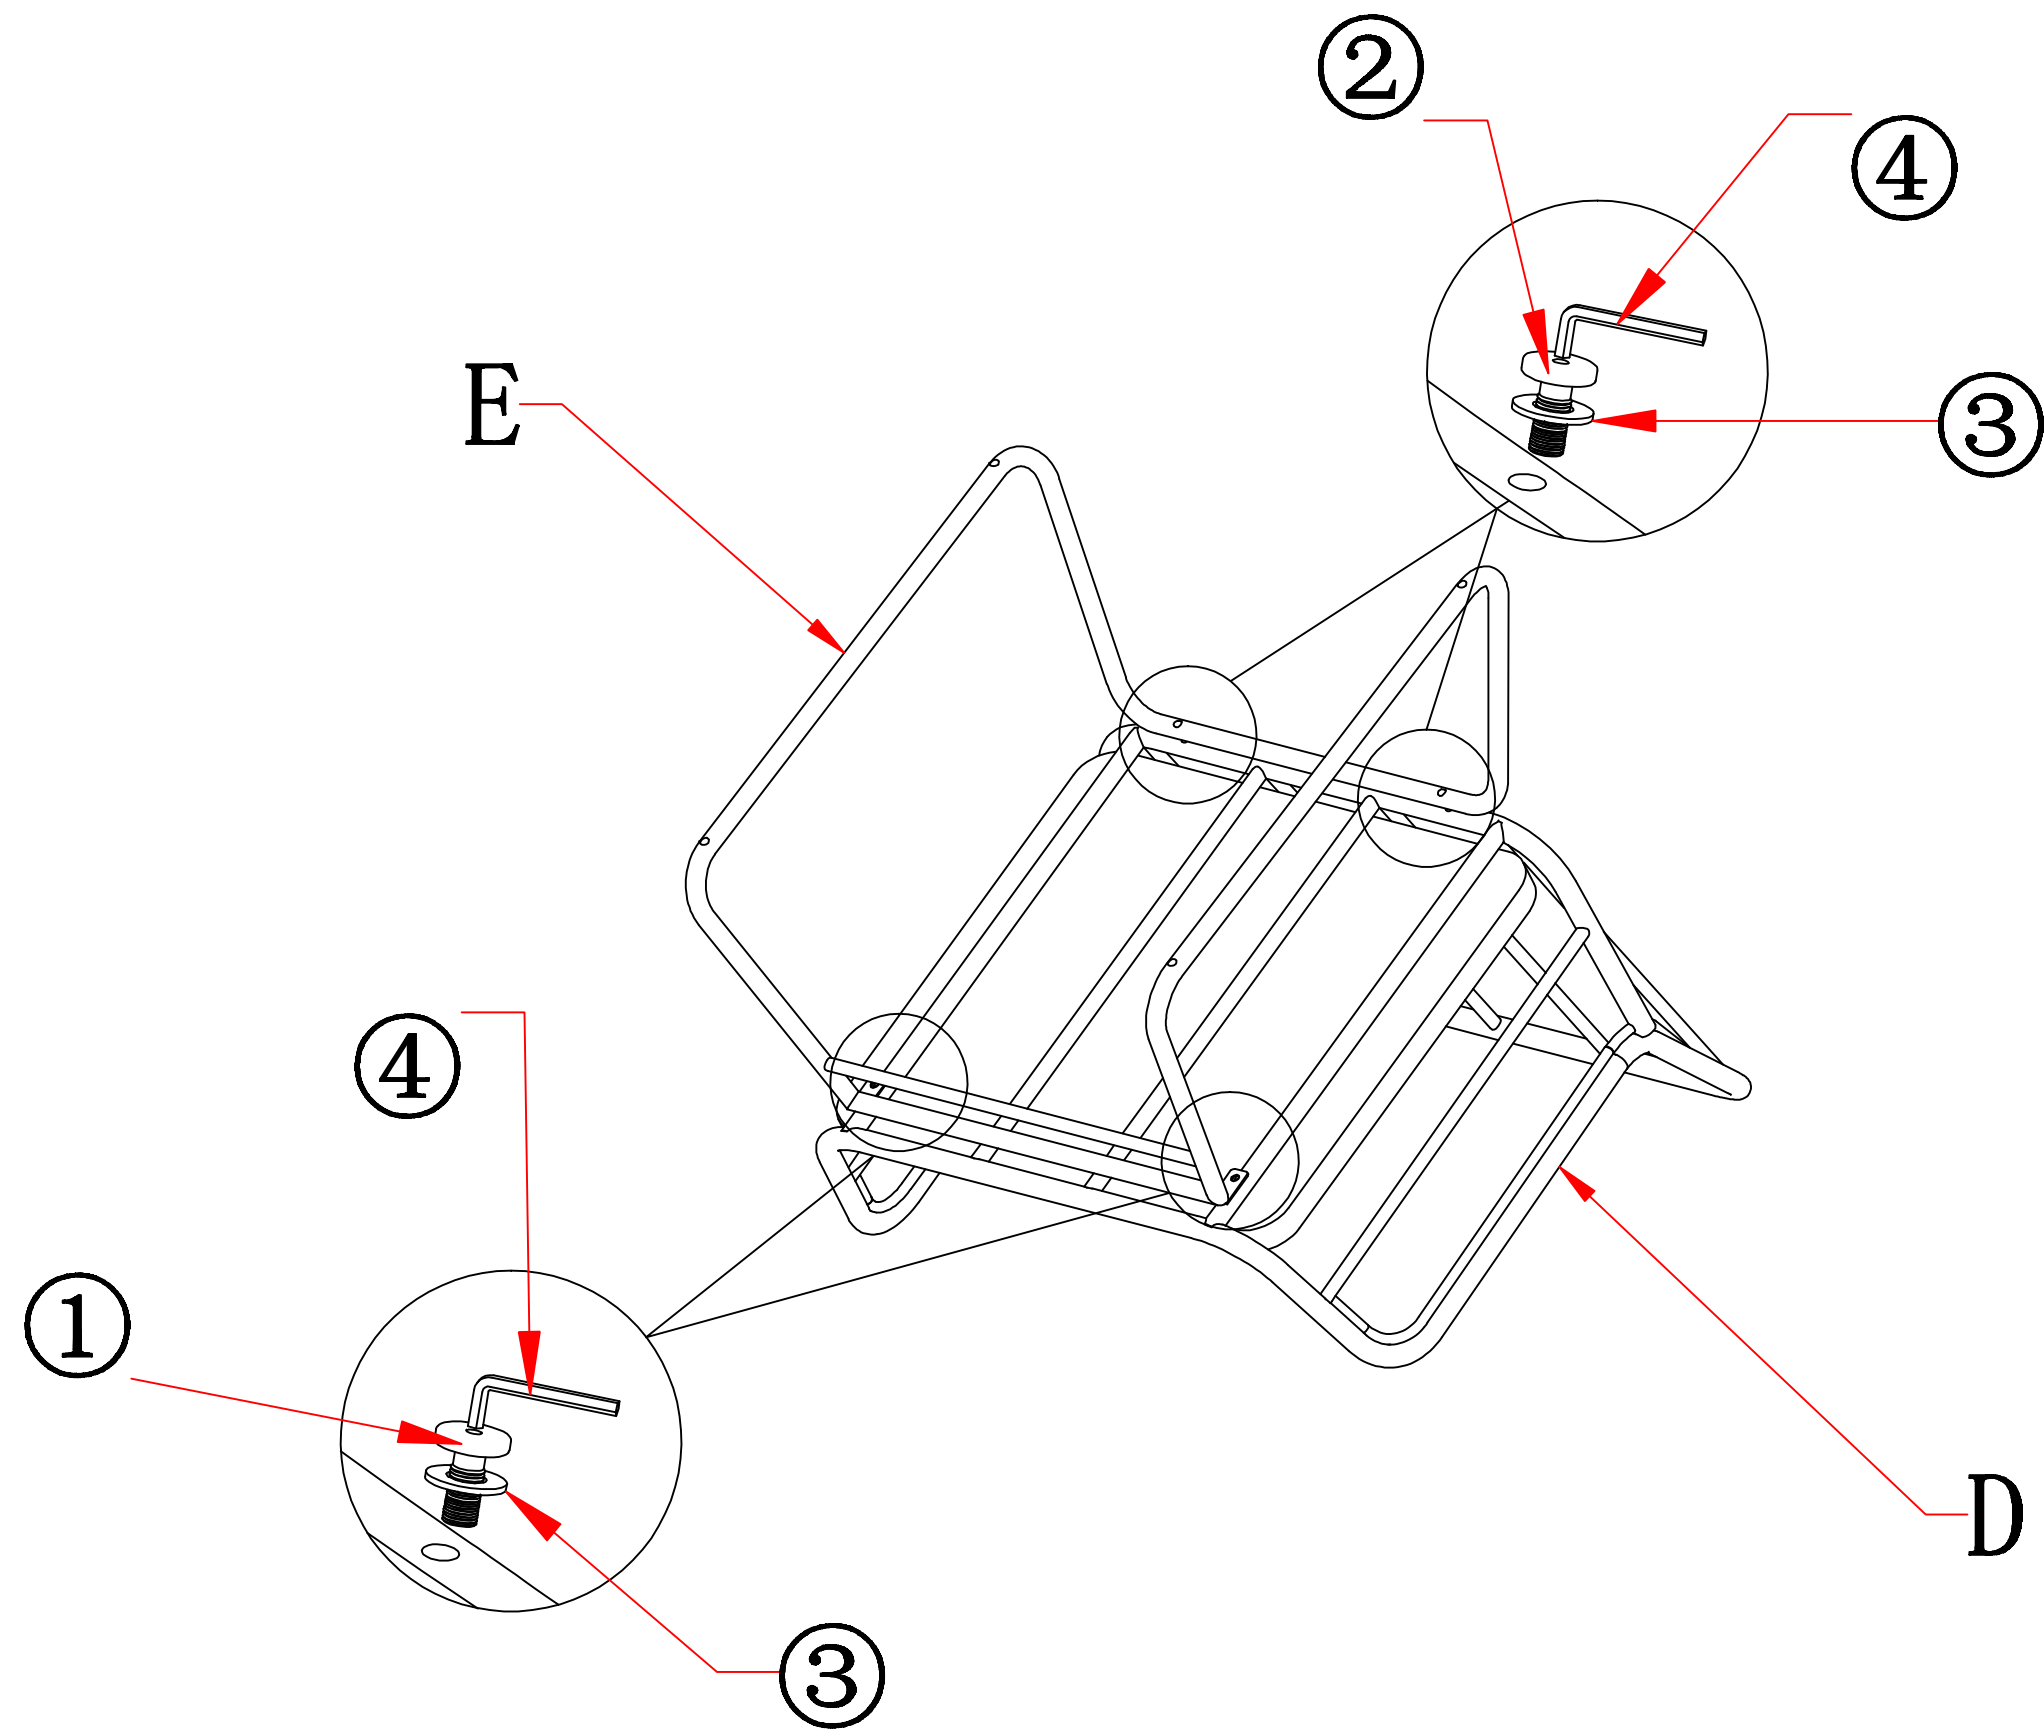



# Assembly Instructions

<p>①  Bolt M6*15mm 2pcs</p>	<p>②  Bolt M6*30mm 2pcs</p>	<p>③  Washer 4pcs</p>	<p>④  Allen Key 1pc</p>
<p>D  1PC</p>	<p>E  1PC</p>	<p>F  1PC</p>	








Step1:



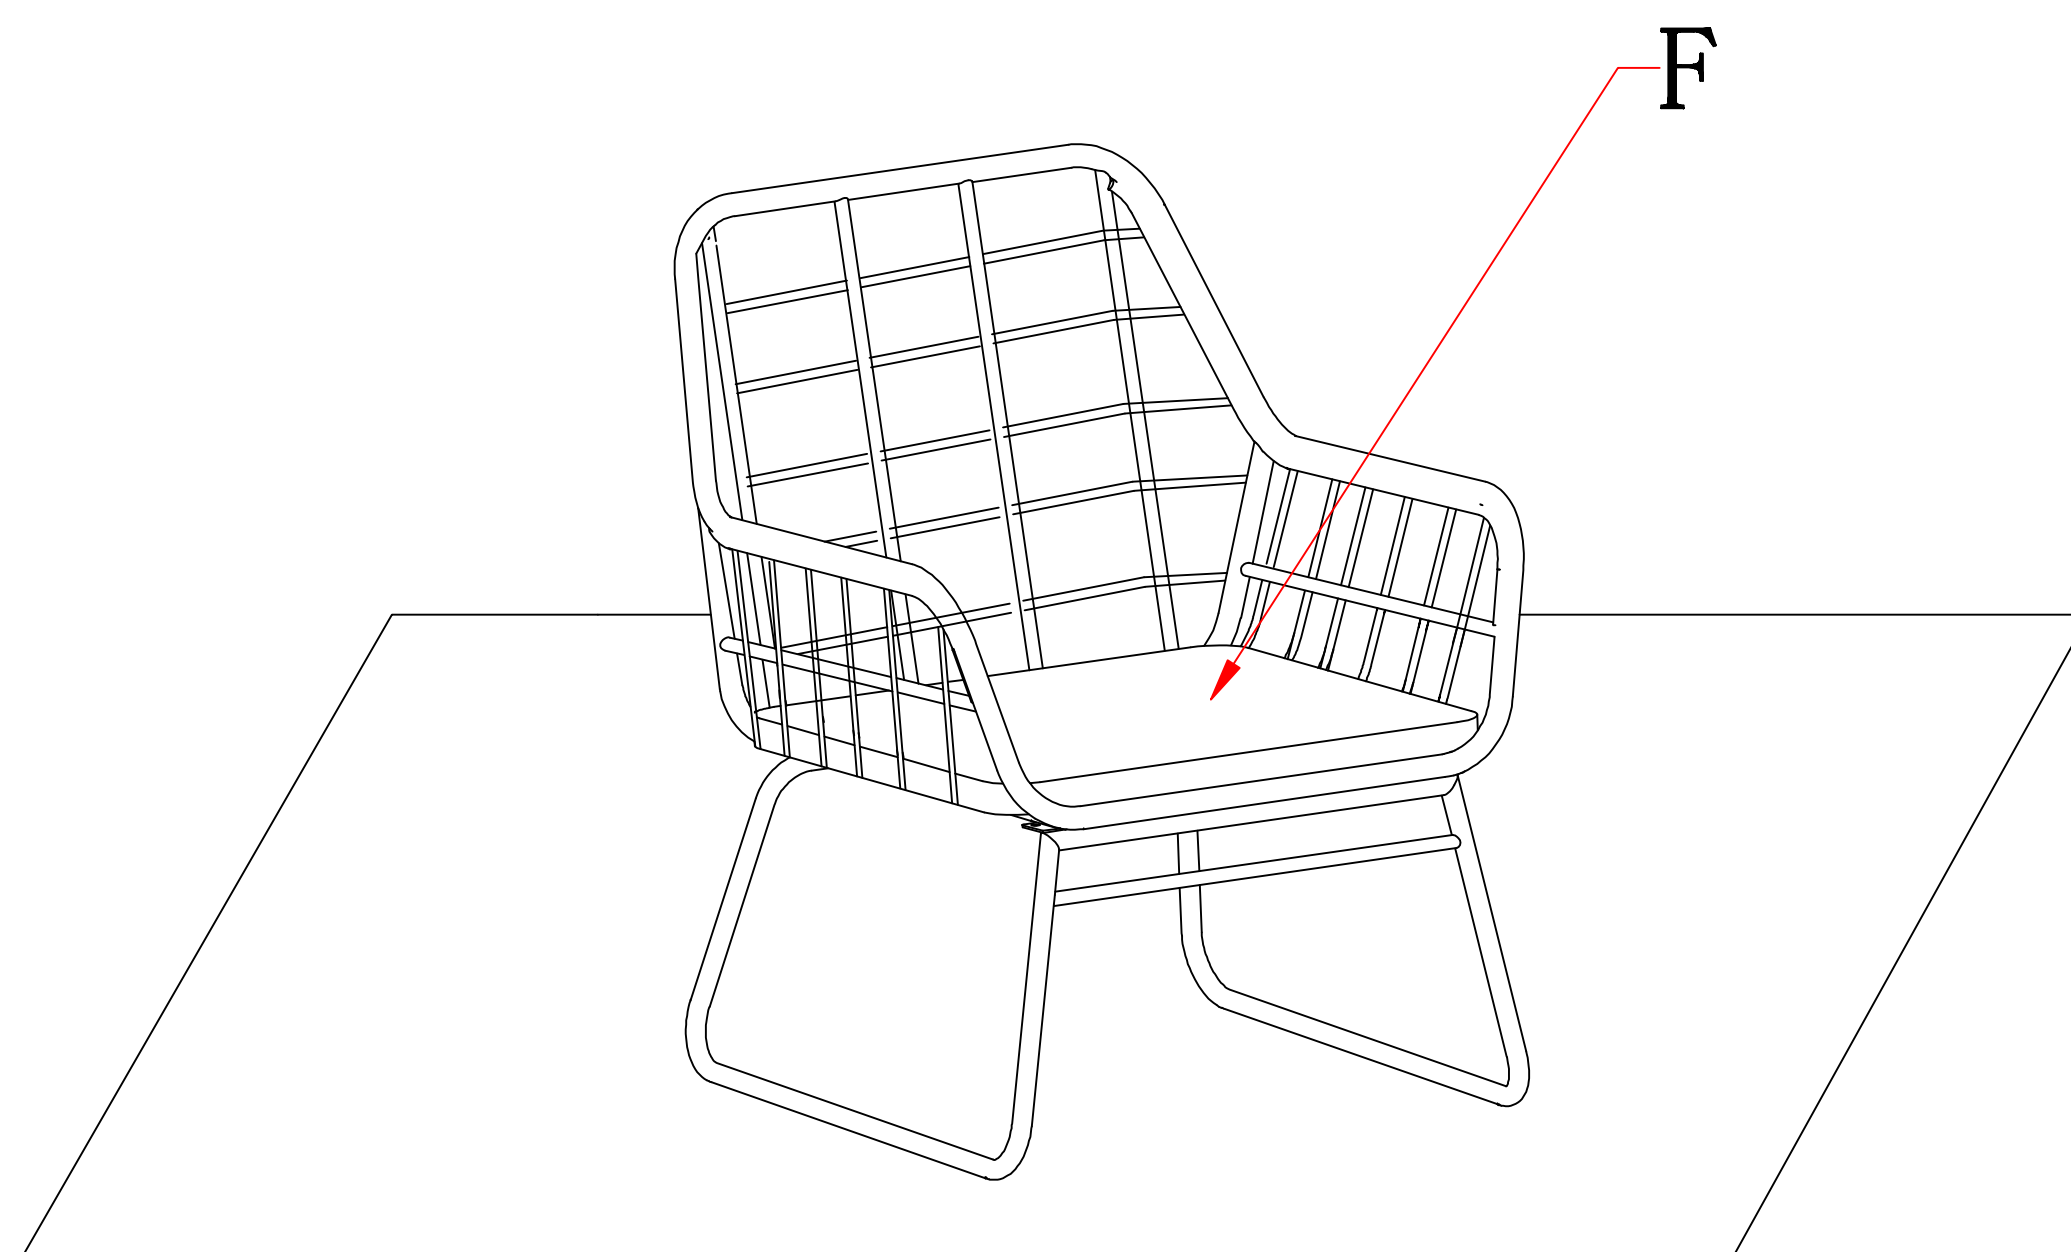
Step2:




# Assembly Instructions

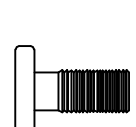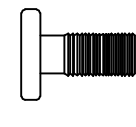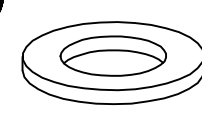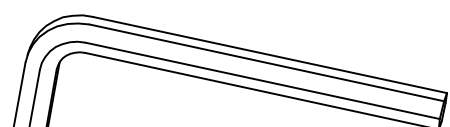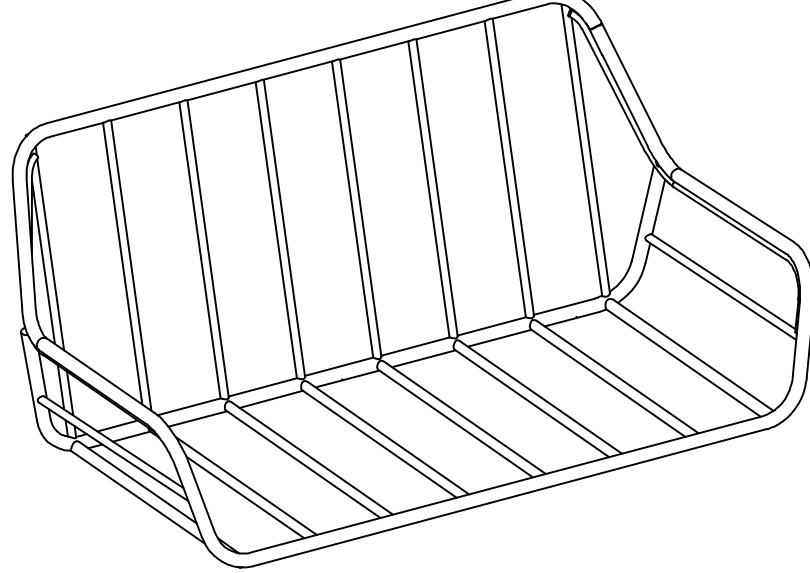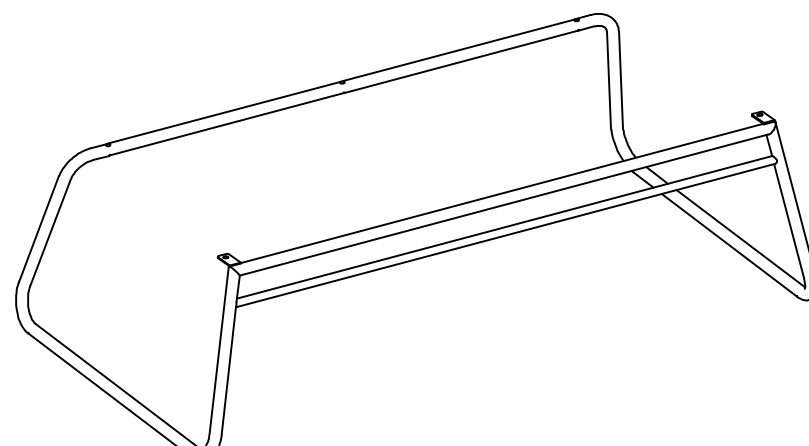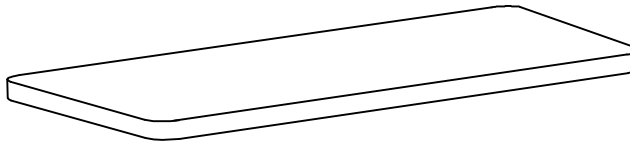①  Bolt M6*15mm 2pcs	②  Bolt M6*30mm 3pcs	③  Washer 5pcs	④  Allen Key 1pc
G  1PC	H  1PC	I  1PC	






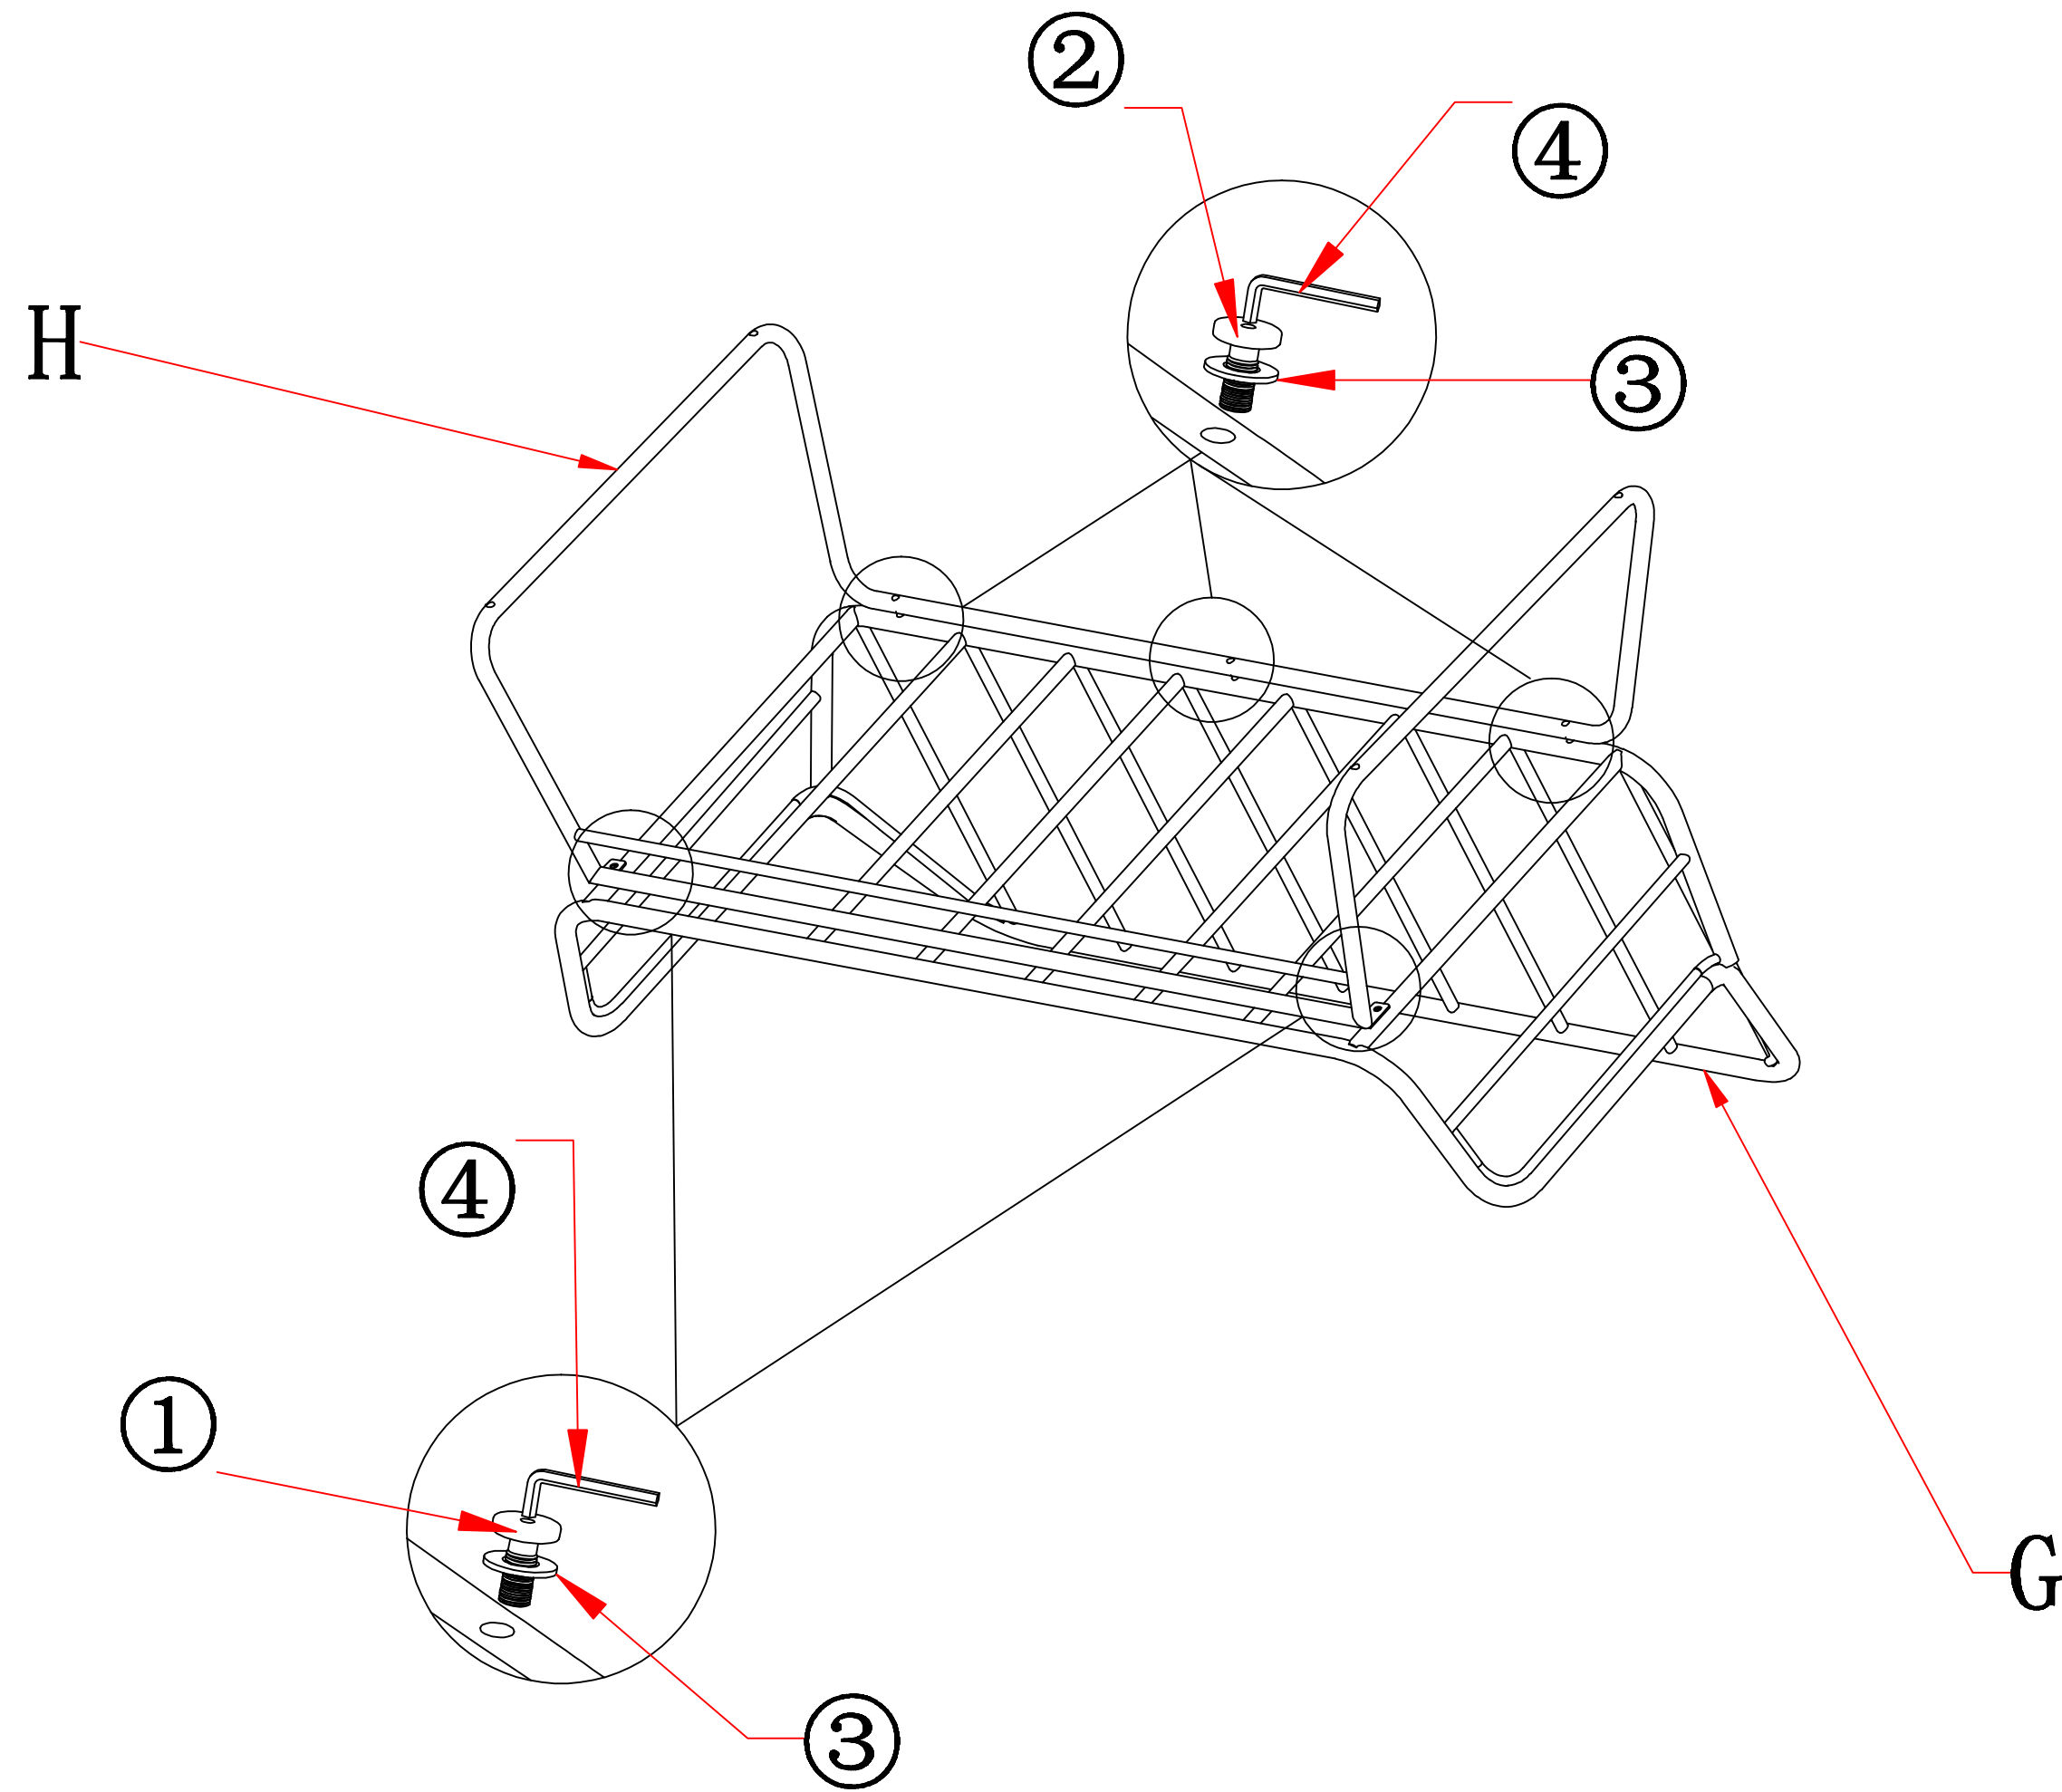
Step1:



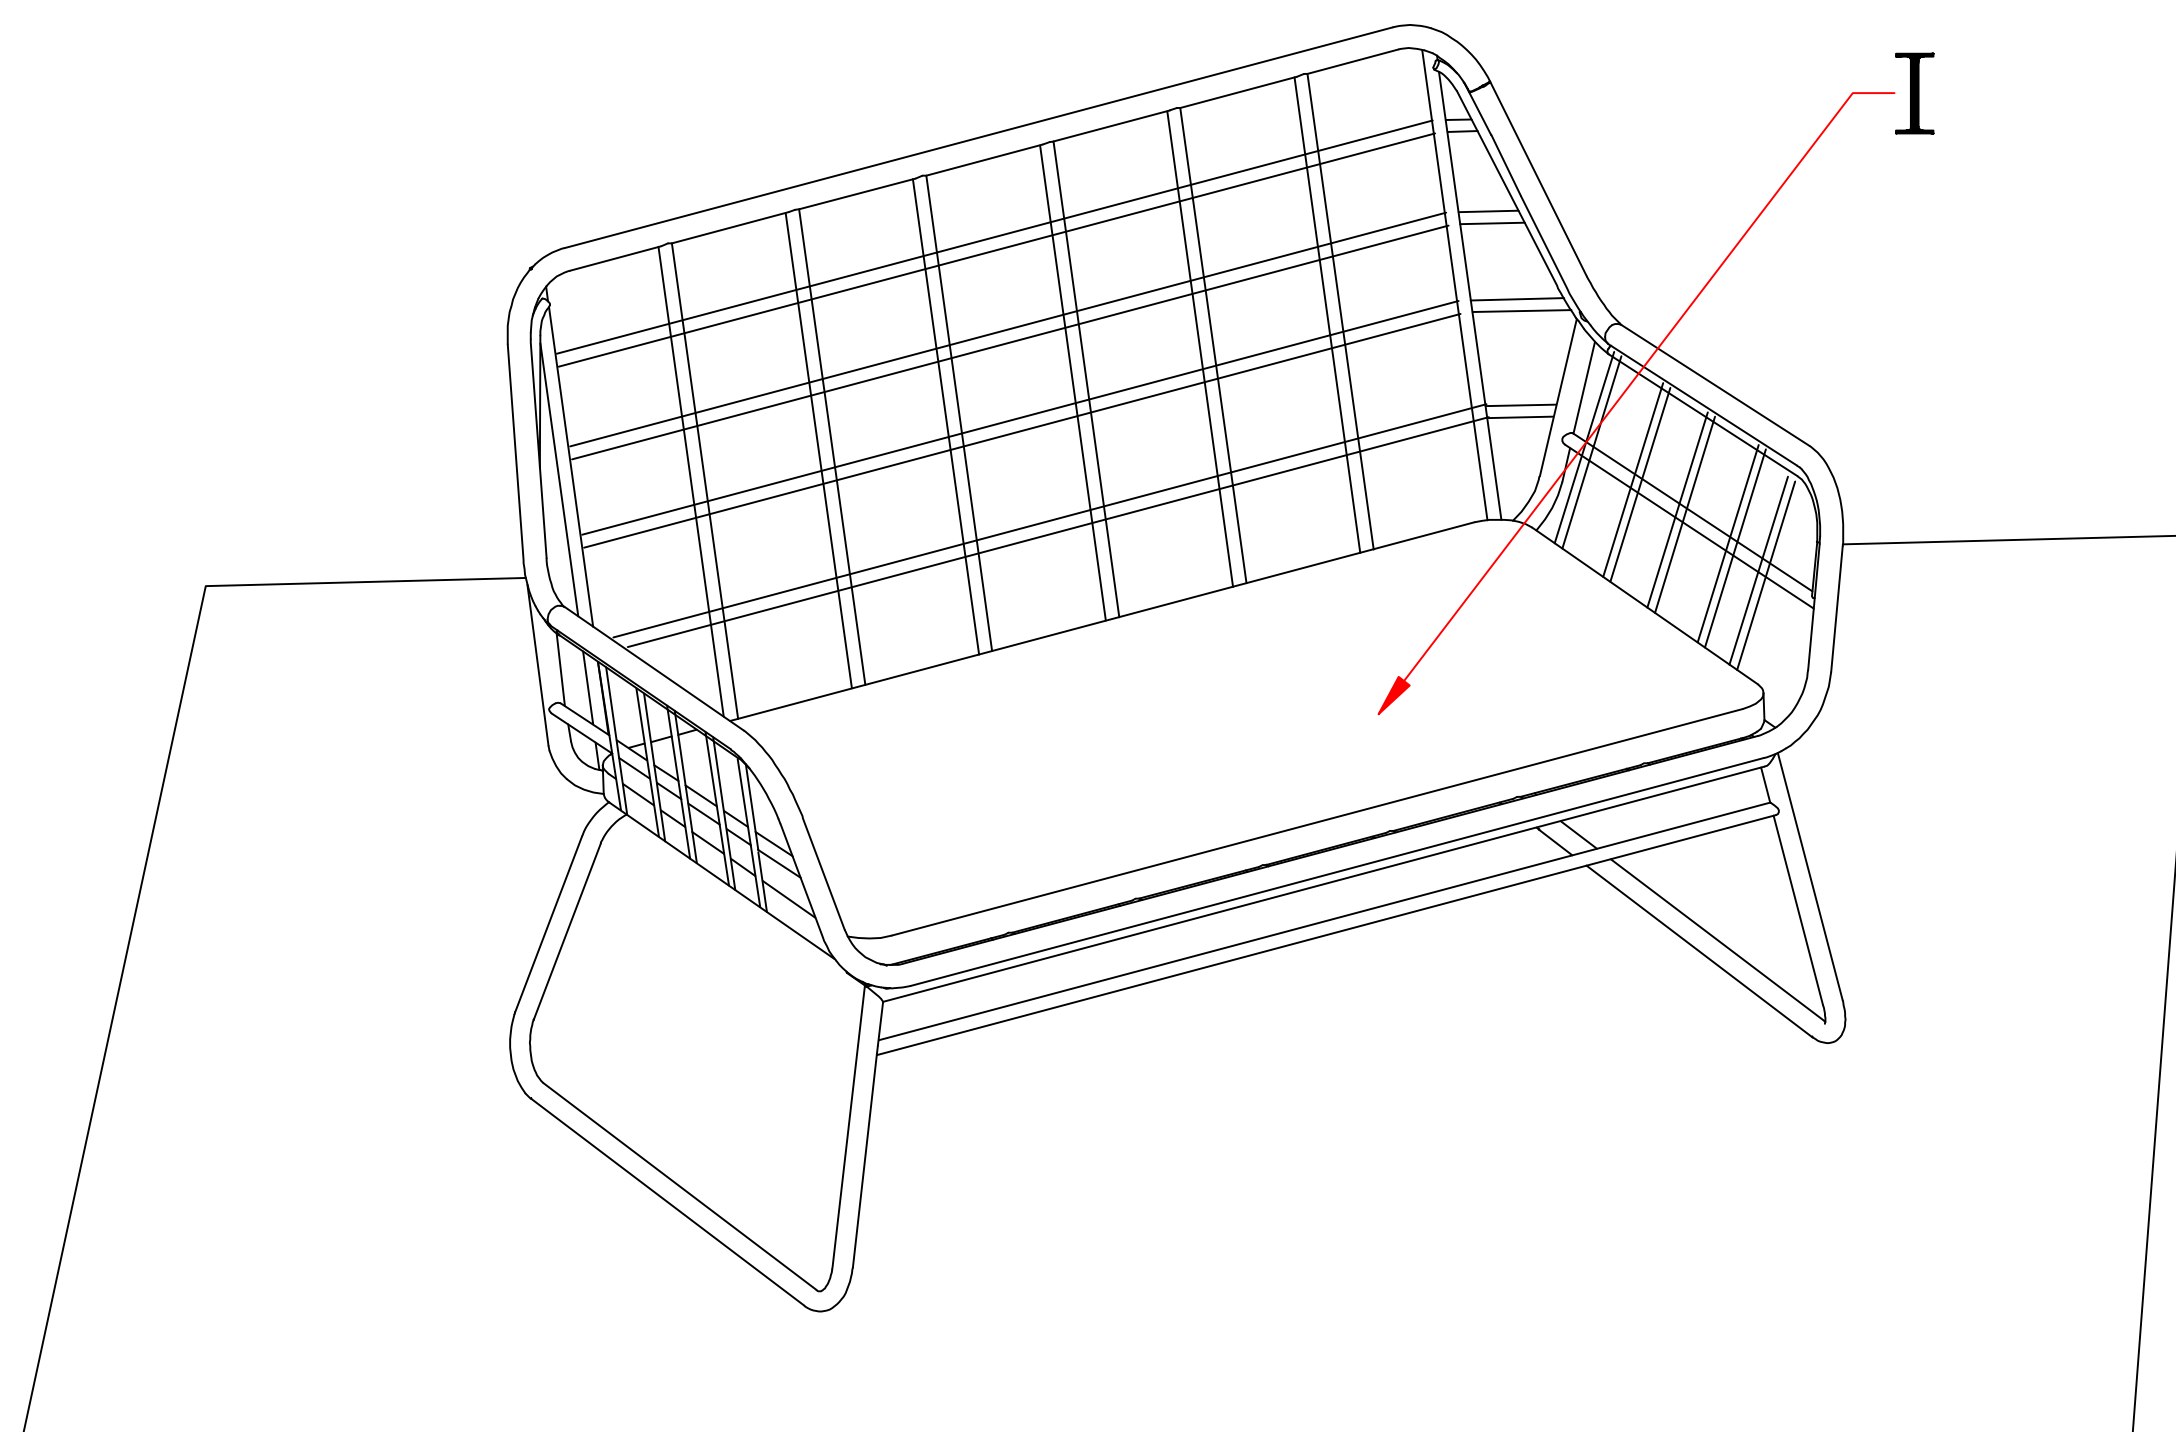
Step2:



# Assembly Instructions
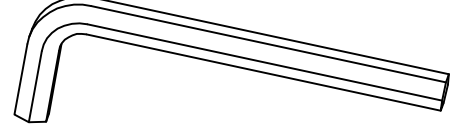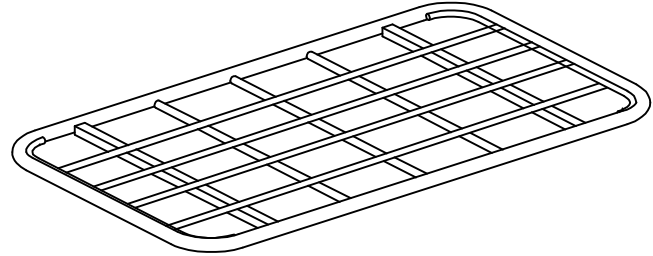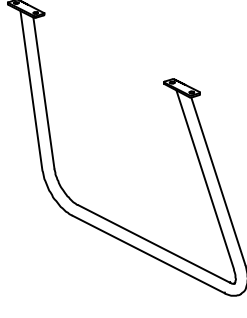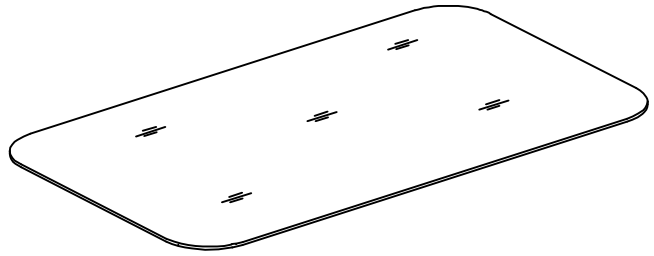
<p>①</p>  <p>Bolt M6*15mm 8pcs</p>	<p>③</p>  <p>Washer 8pcs</p>	<p>④</p>  <p>Allen Key 1pc</p>
<p>A</p>  <p>1PC</p>	<p>B</p>  <p>2PCS</p>	<p>C</p>  <p>1PC</p>

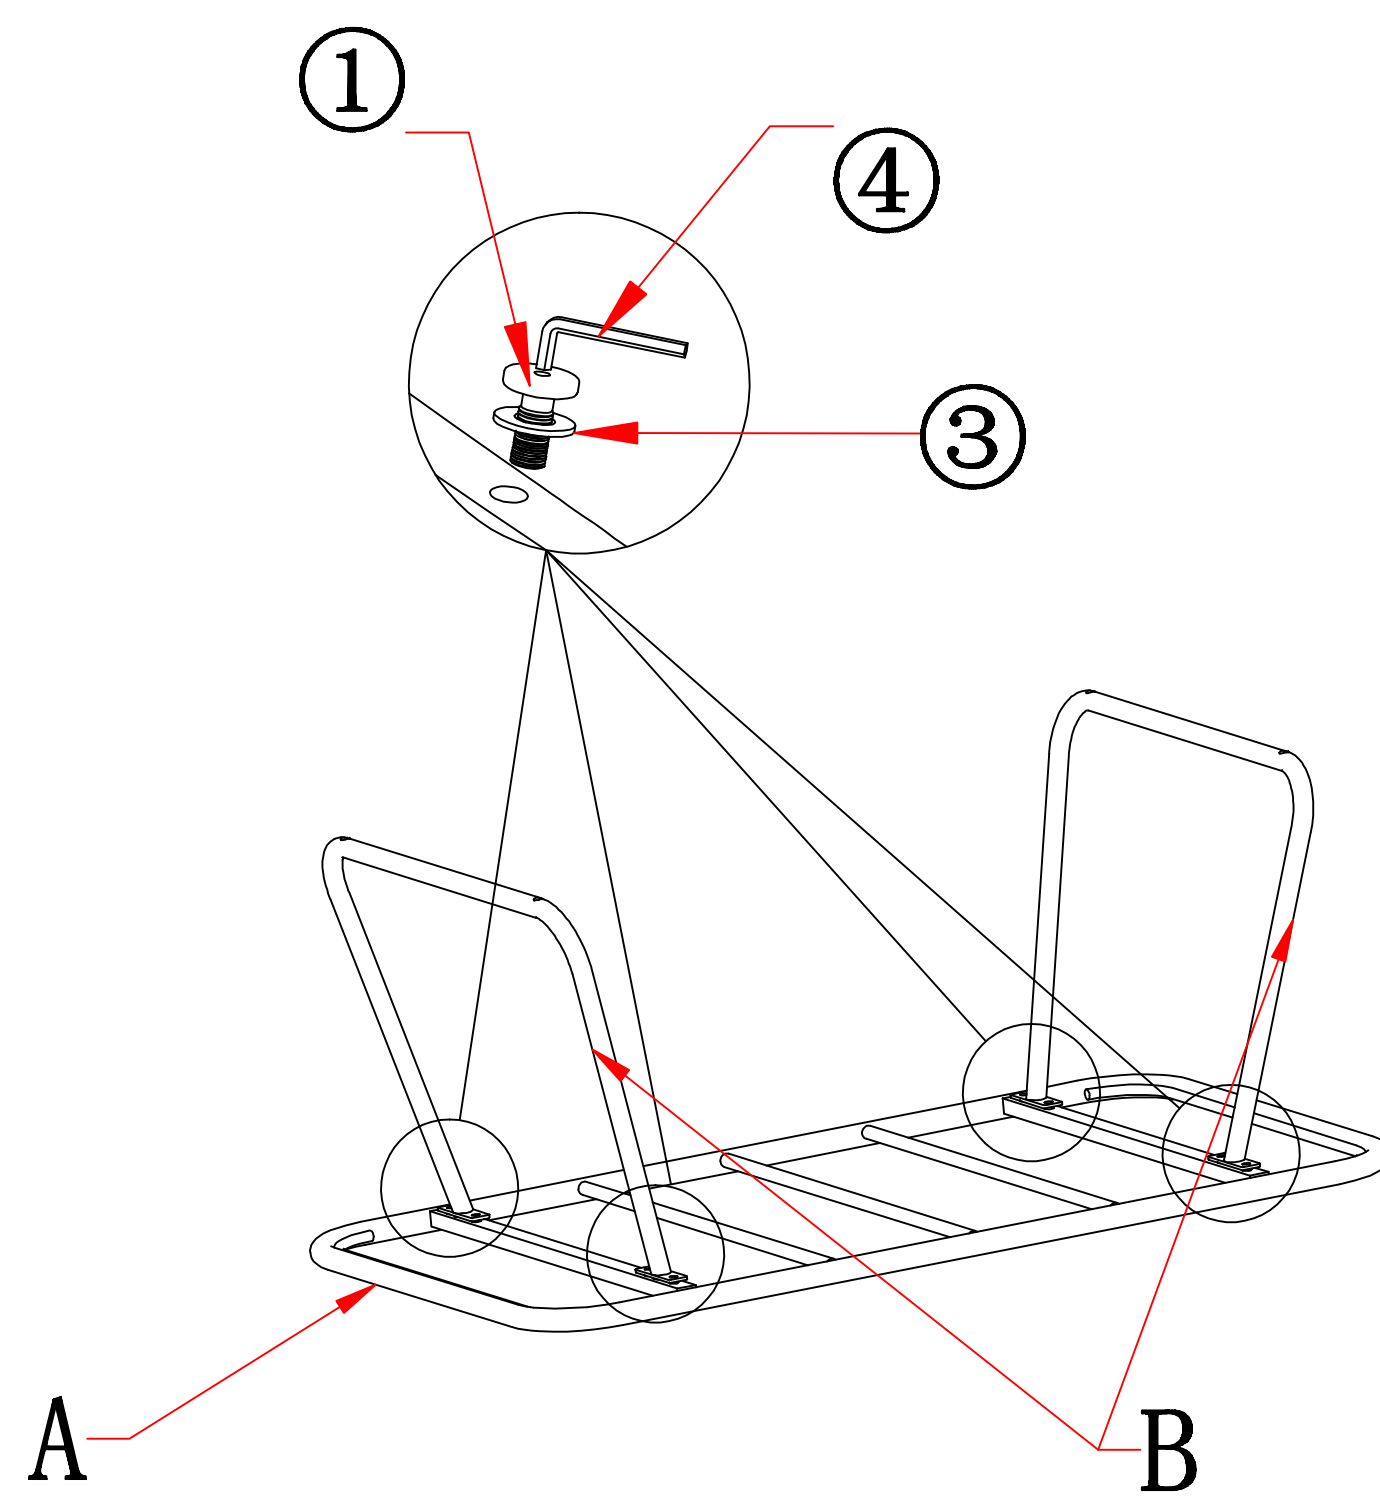Step1:



Step2:

