









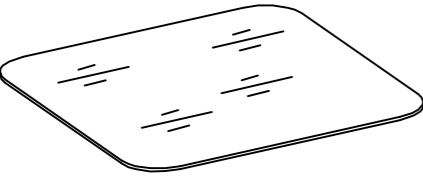




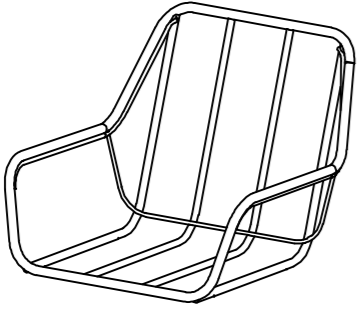
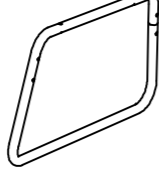
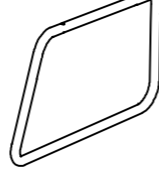

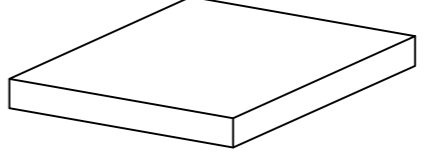
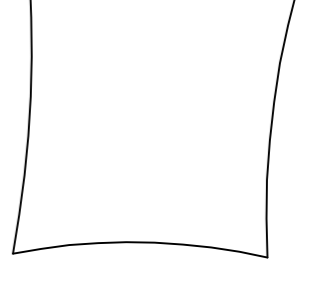


Assembly Instructions

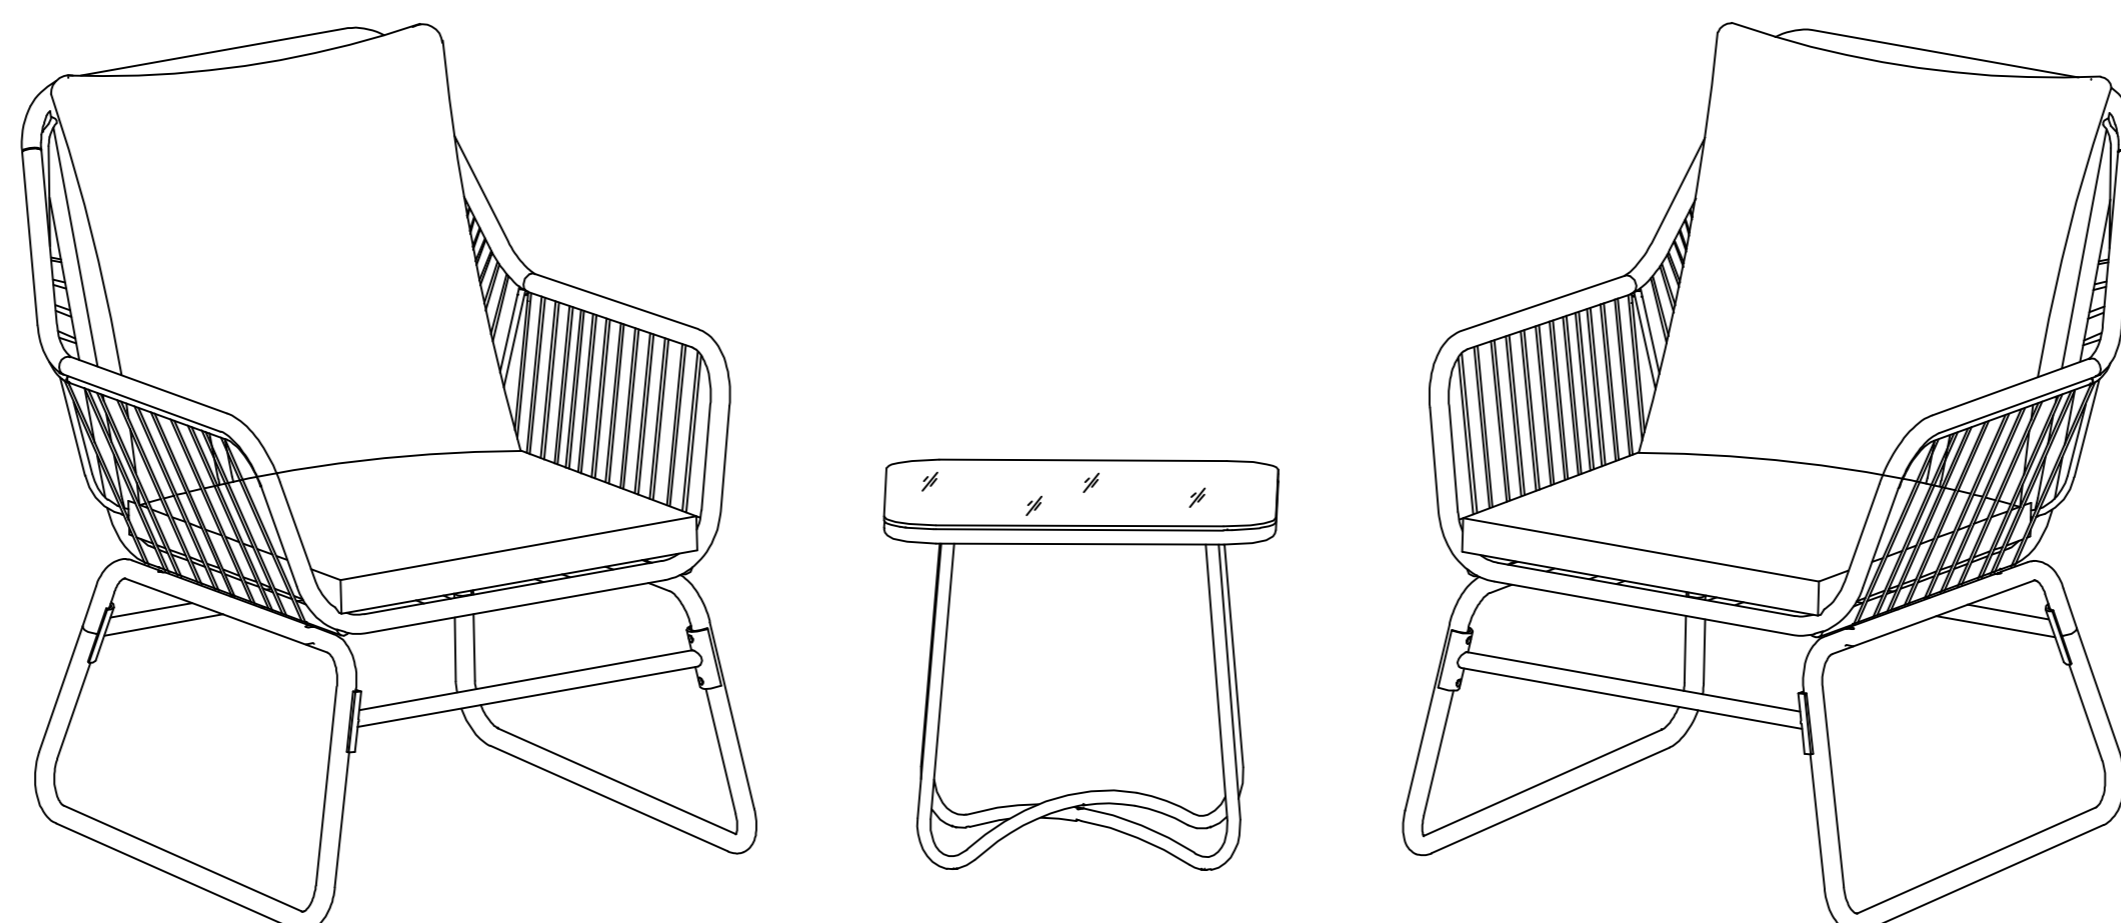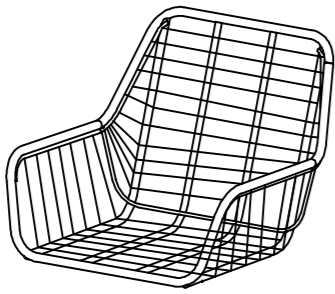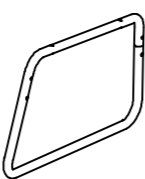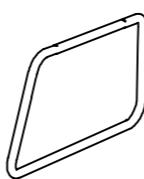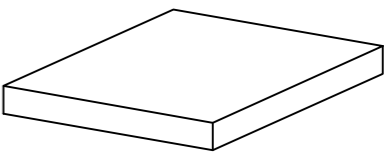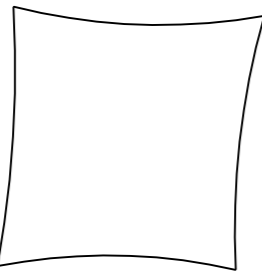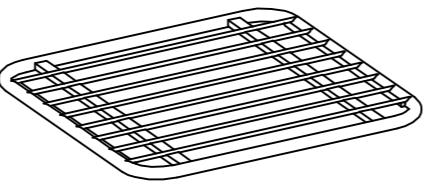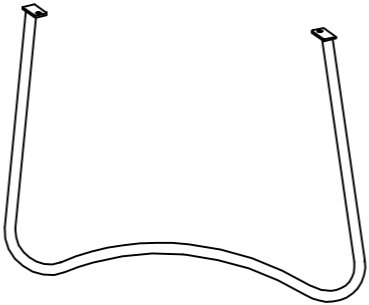


① Bolt M6*15mm 20pcs	② Bolt M6*25mm 1pc	③ Bolt M6*35mm 8pcs	④ Washer 29pcs	⑤ Allen Key 1pc
A  2 PCS	B  2 PCS	C  2 PCS	D  4 PCS	E  2 PCS
F  2 PCs	G  1 PC	H  1 PC	I  1 PC	
J  1 PC				


Assembly Instructions

<p>①  8pcs</p>	<p>③  4pcs</p>	<p>④  12pcs</p>	<p>⑤  1pc</p>		
<p>A  1PC</p>	<p>B  1PC</p>	<p>C  1PC</p>	<p>D  2PCs</p>	<p>E  1PC</p>	<p>F  1PC</p>


Step1:

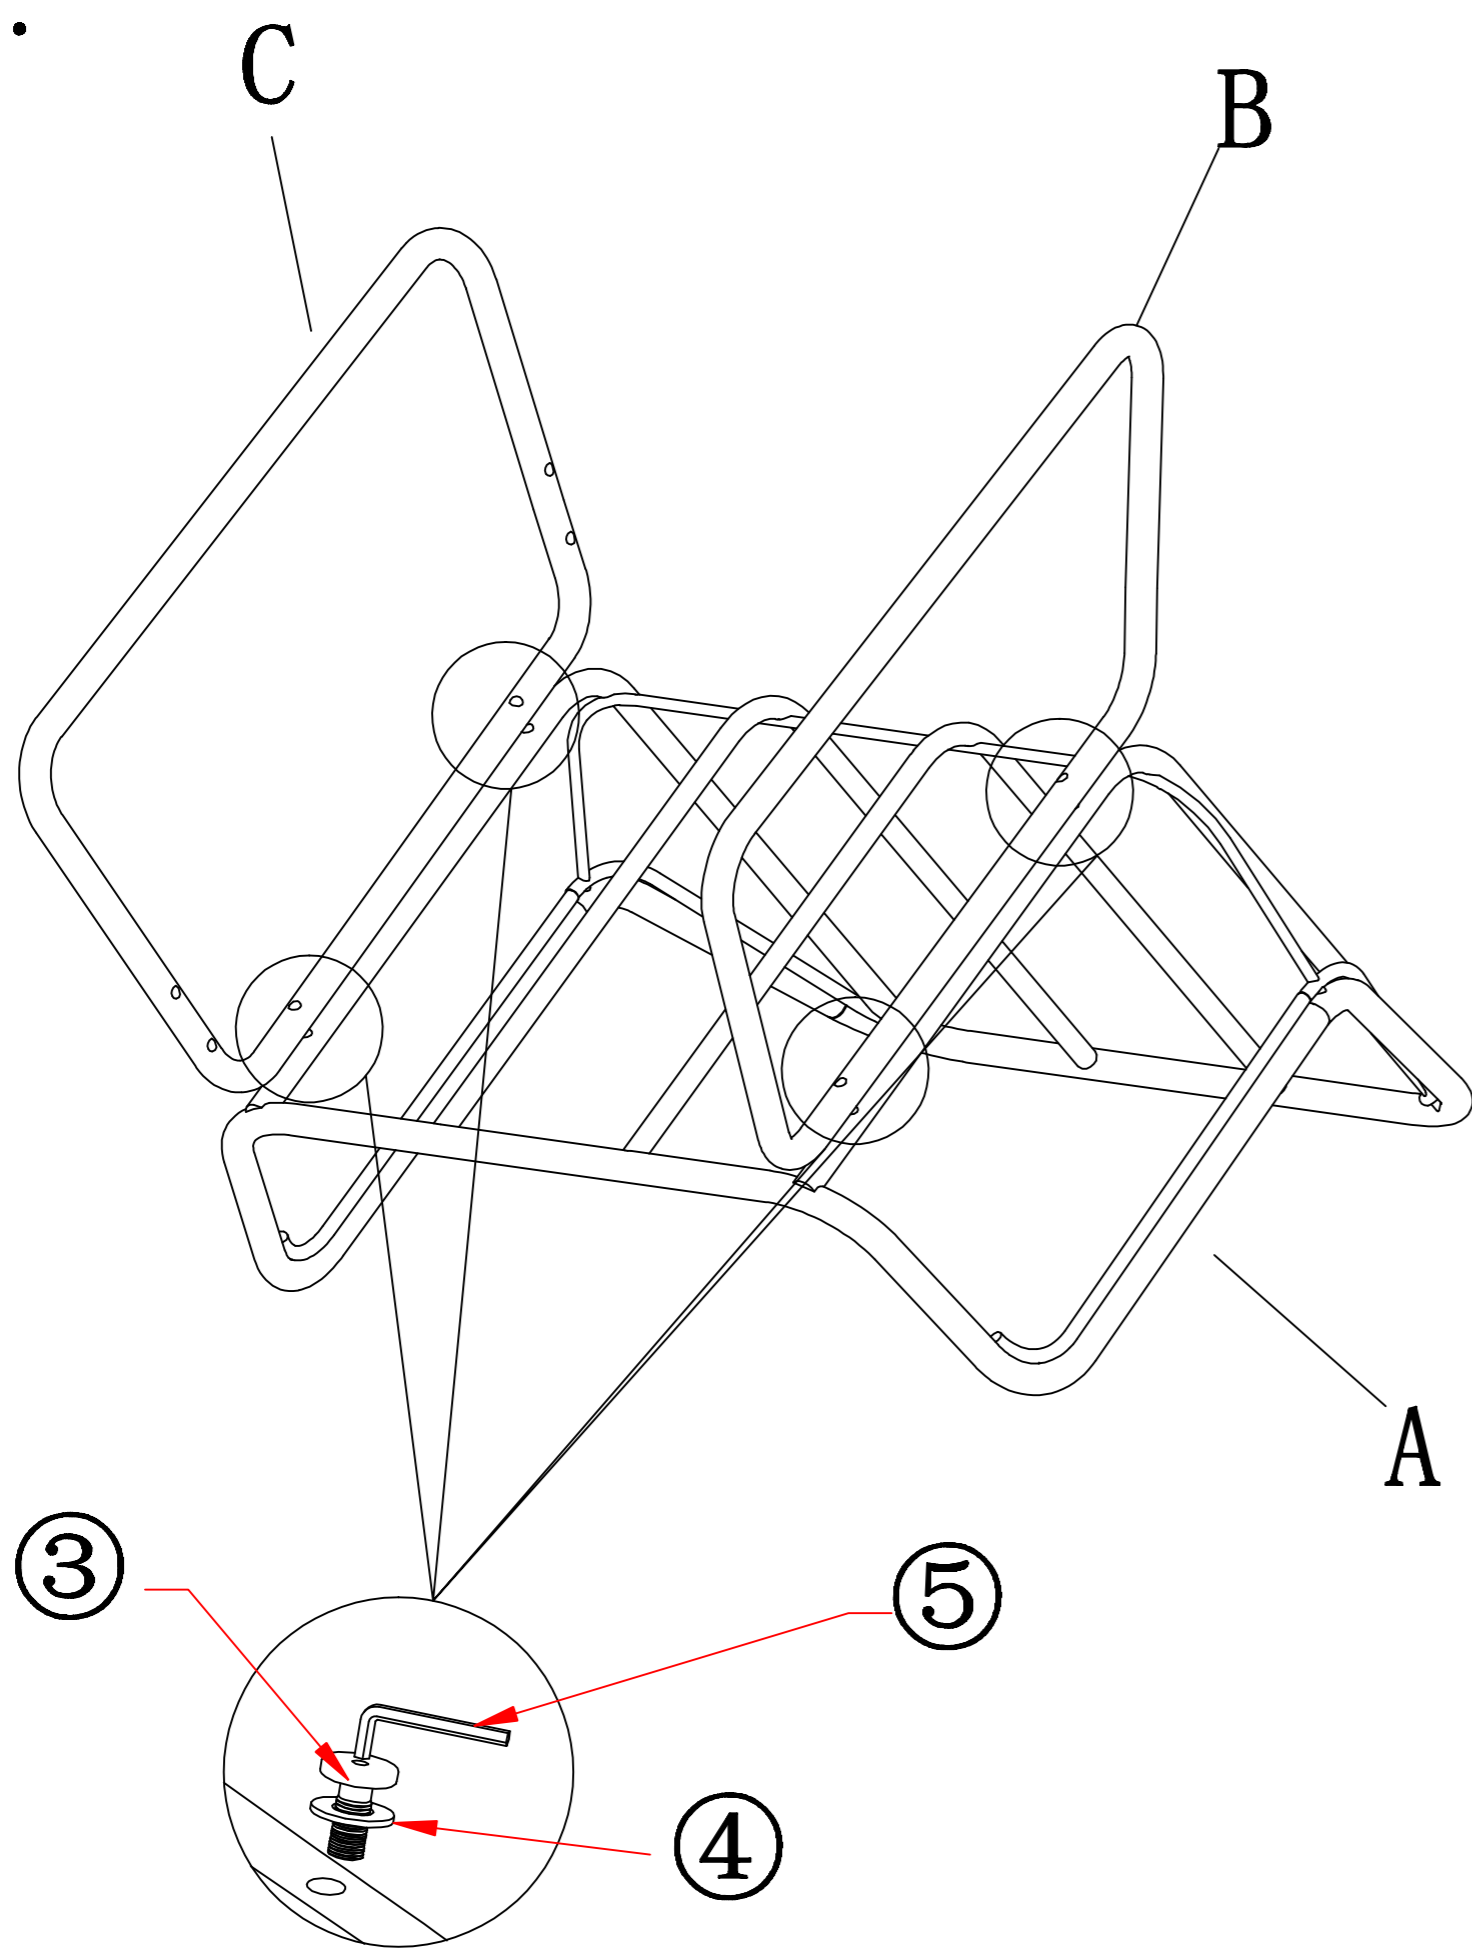

Step2:

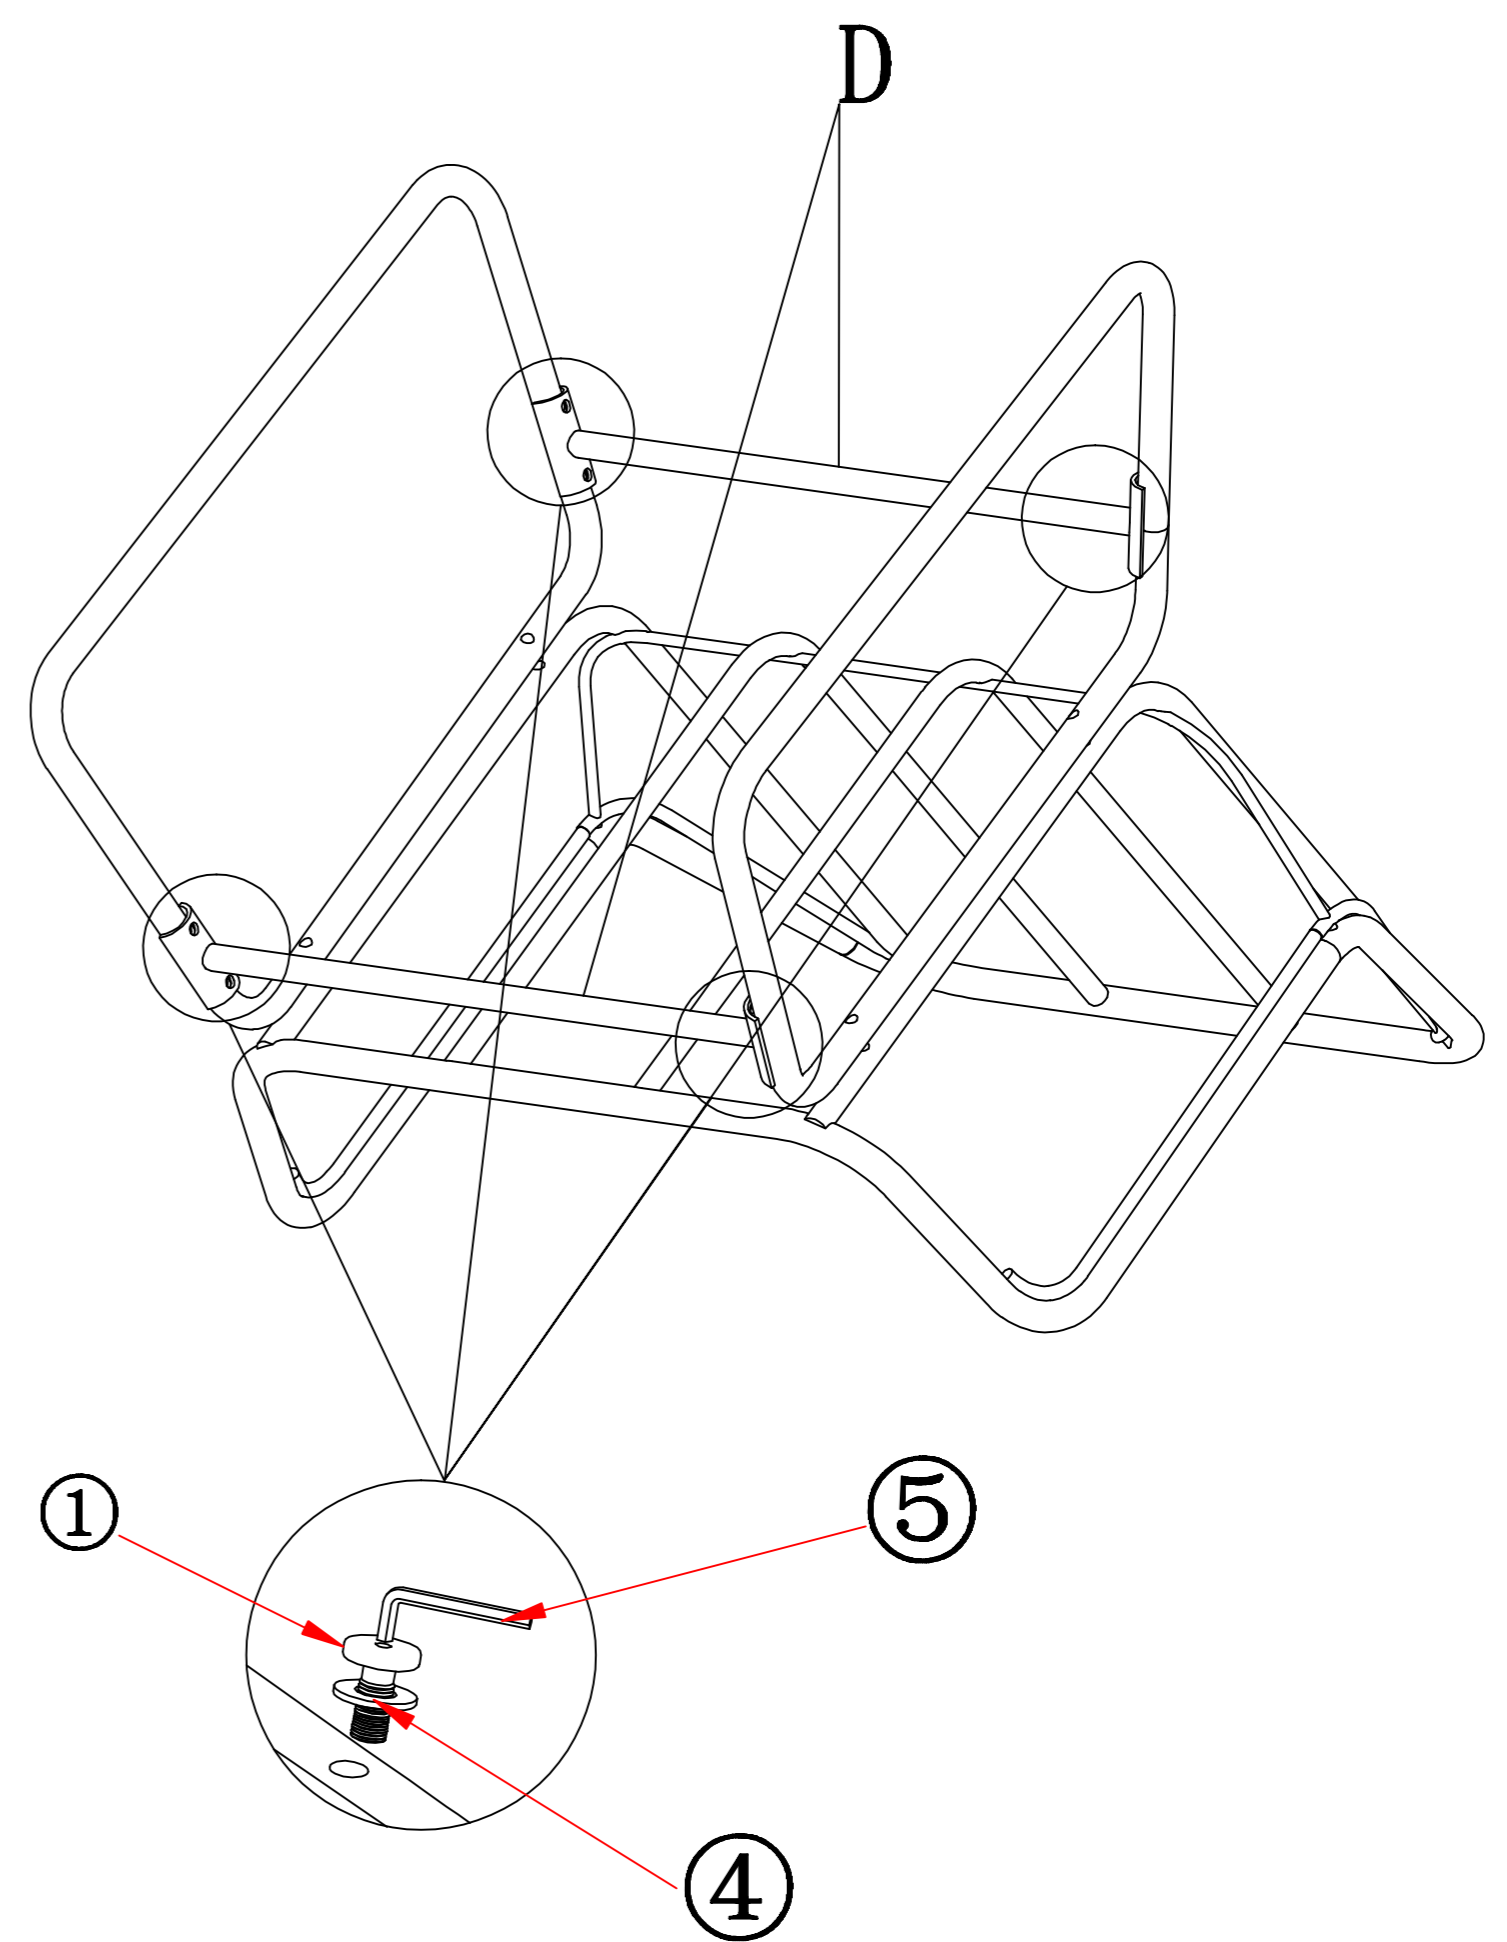


Step3:

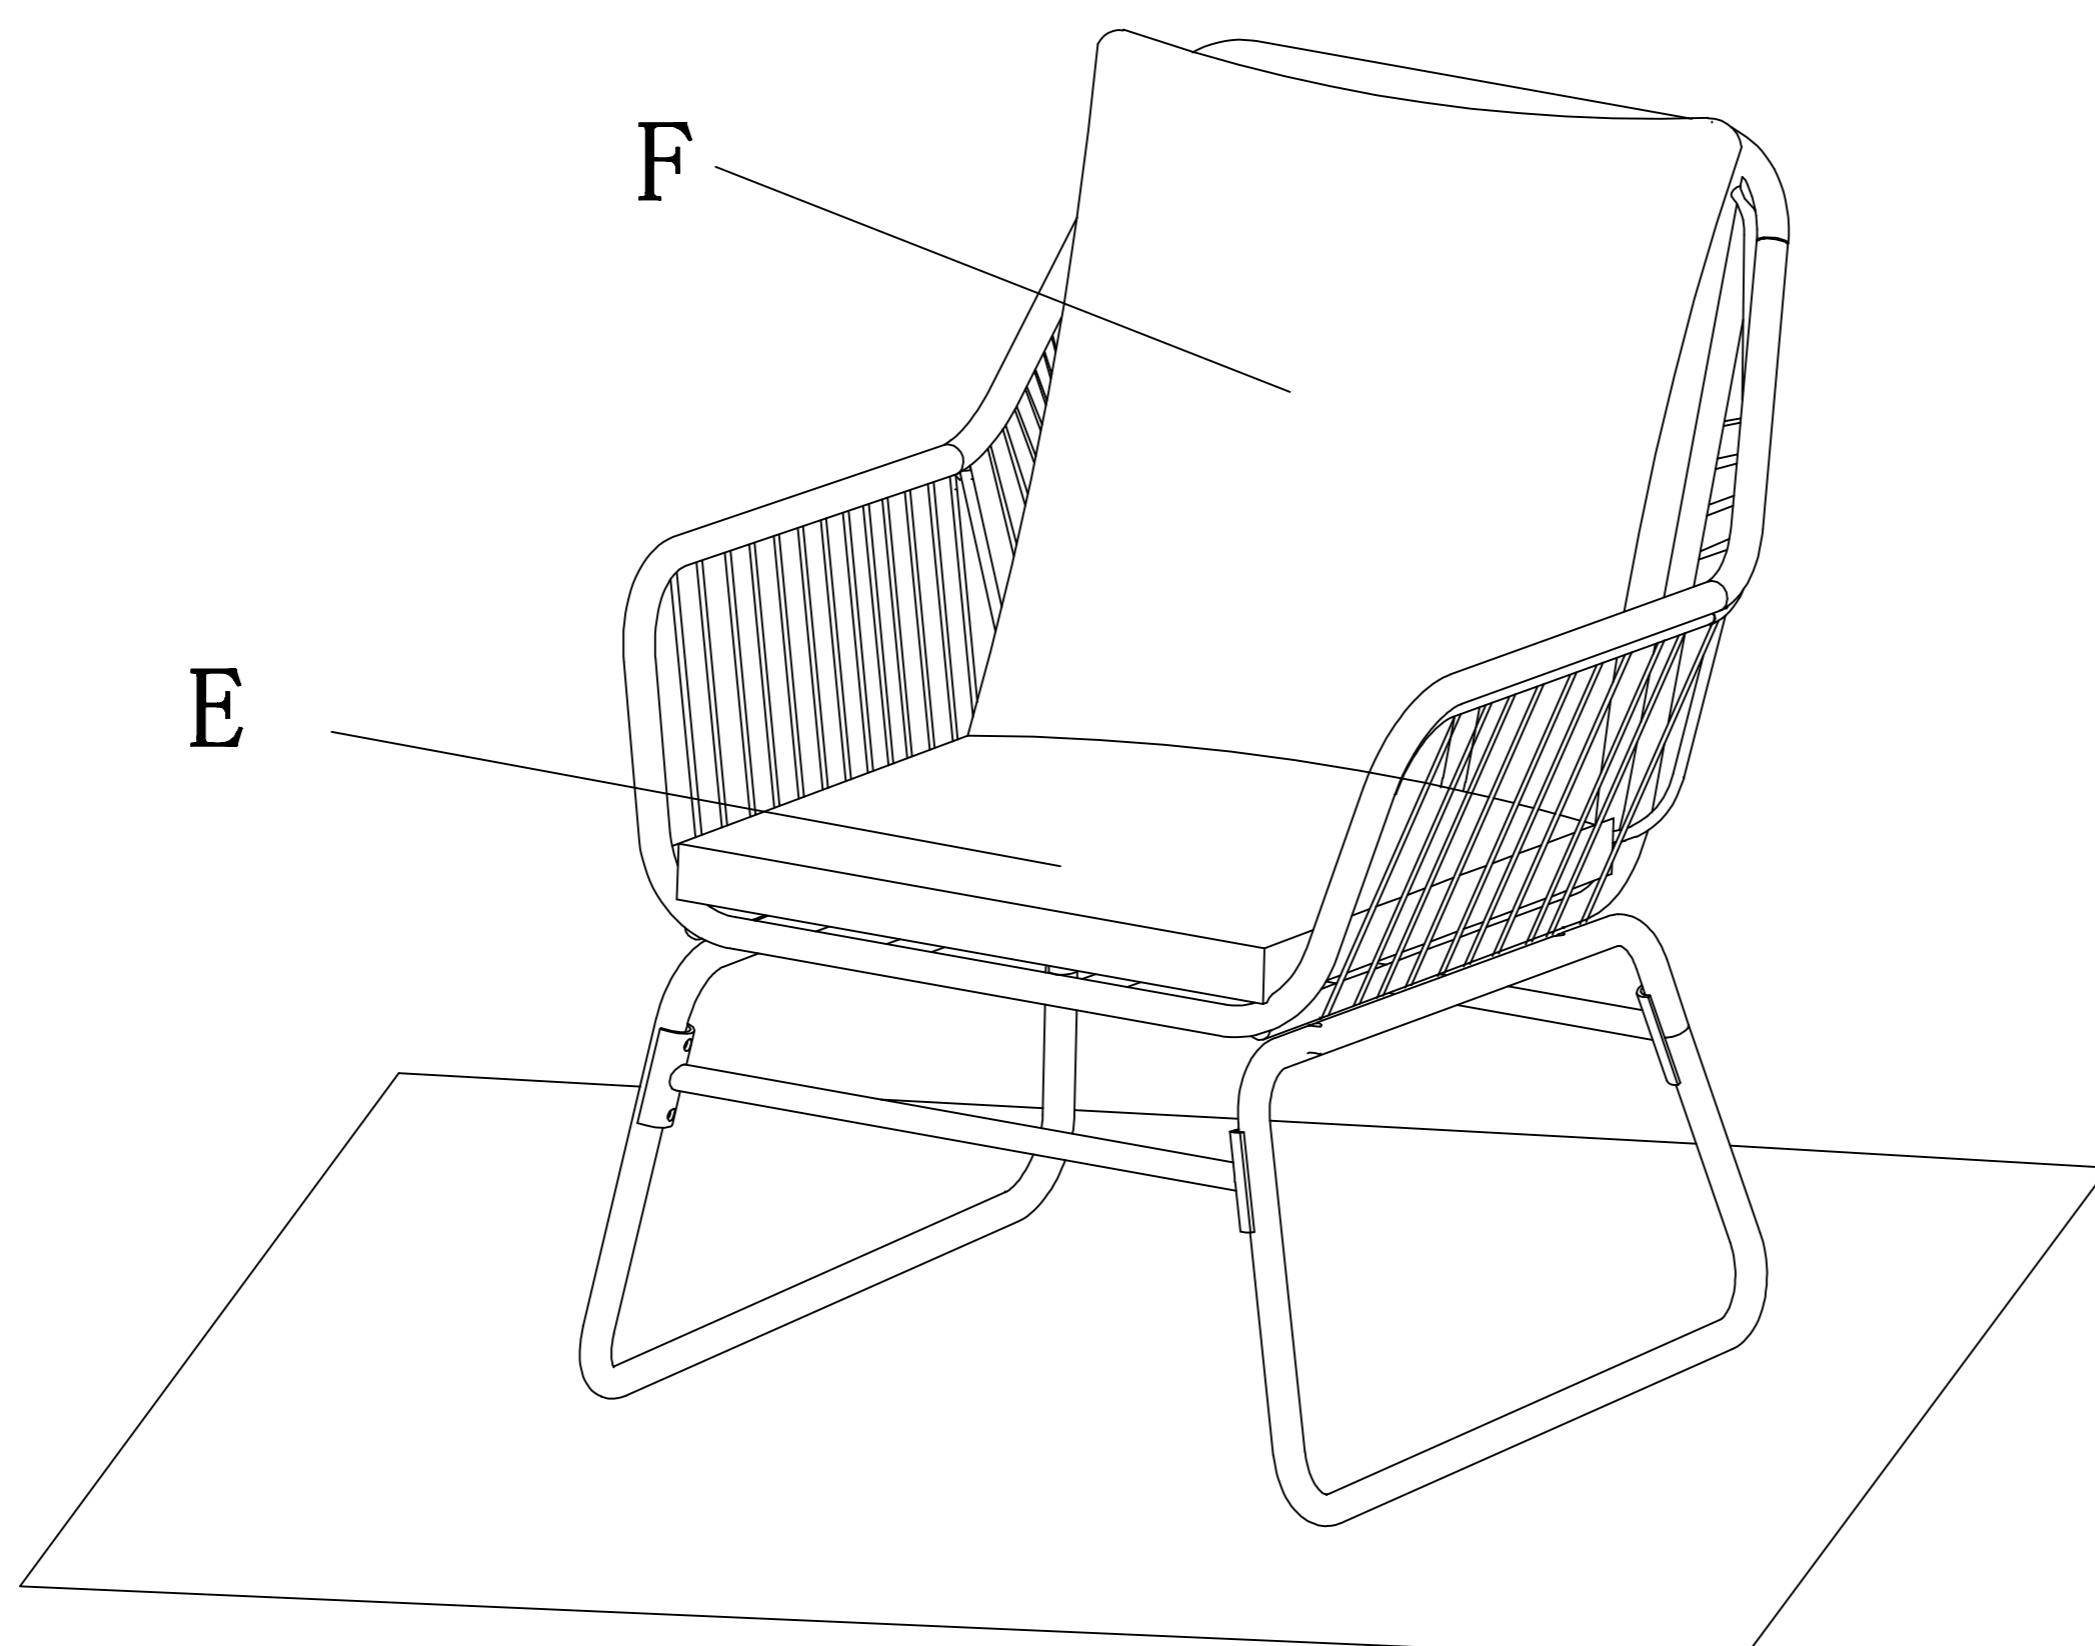


Assembly Instructions

<p>① Bolt M6*15mm 4pcs</p>	<p>② Bolt M6*25mm 1pc</p>	<p>④ Washer 5pcs</p>	<p>⑤ Allen Key 1pc</p>
<p>G 1PC</p>	<p>H 1PC</p>	<p>I 1PC</p>	<p>J 1PC</p>

Step1:

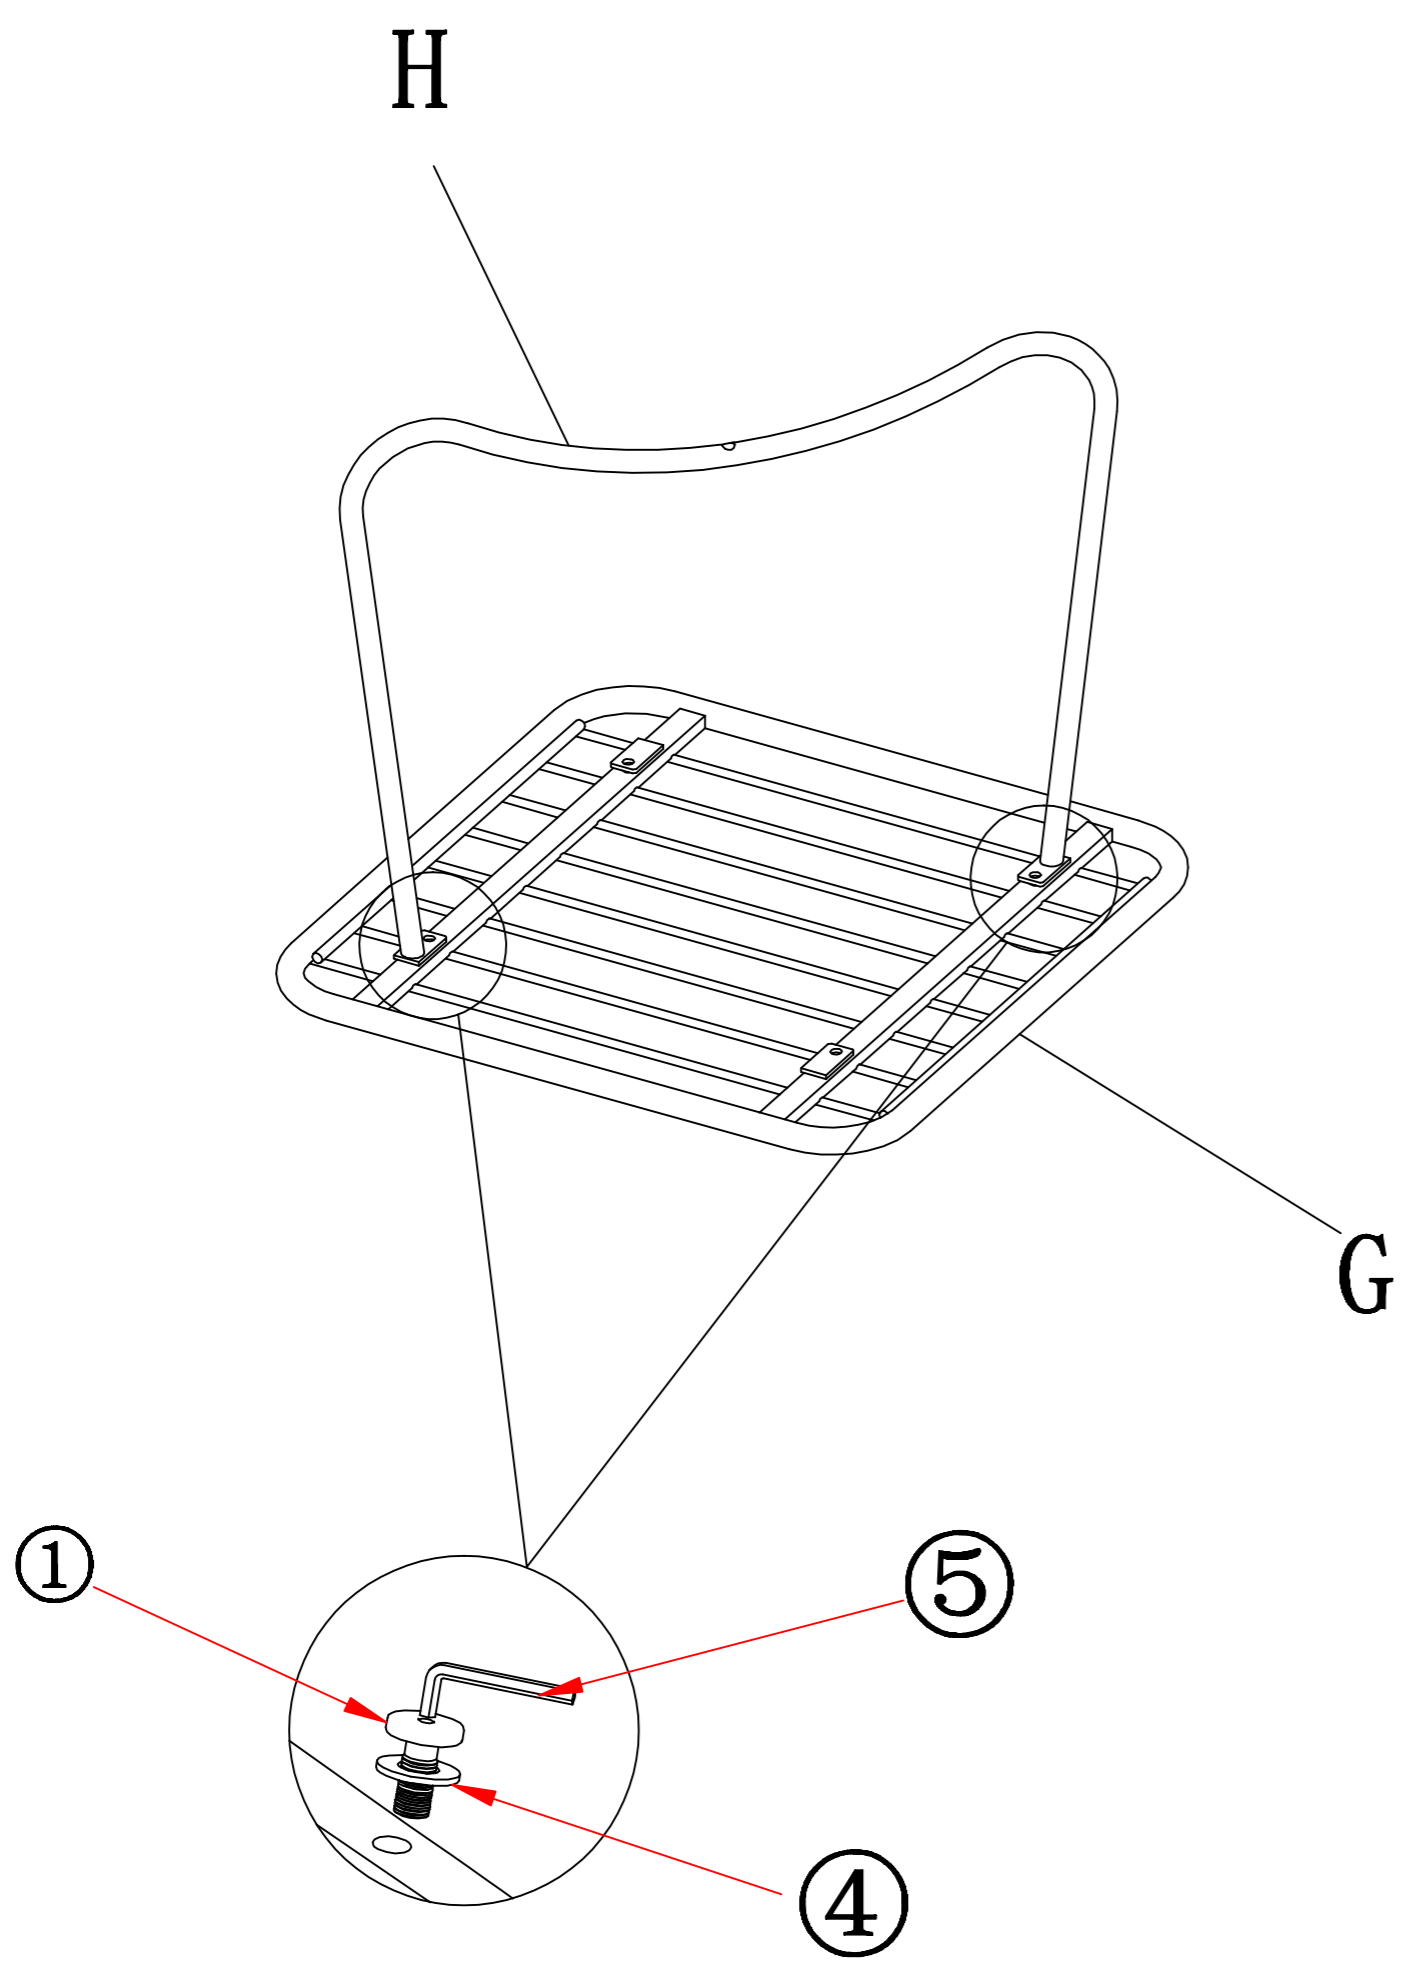

Step2:

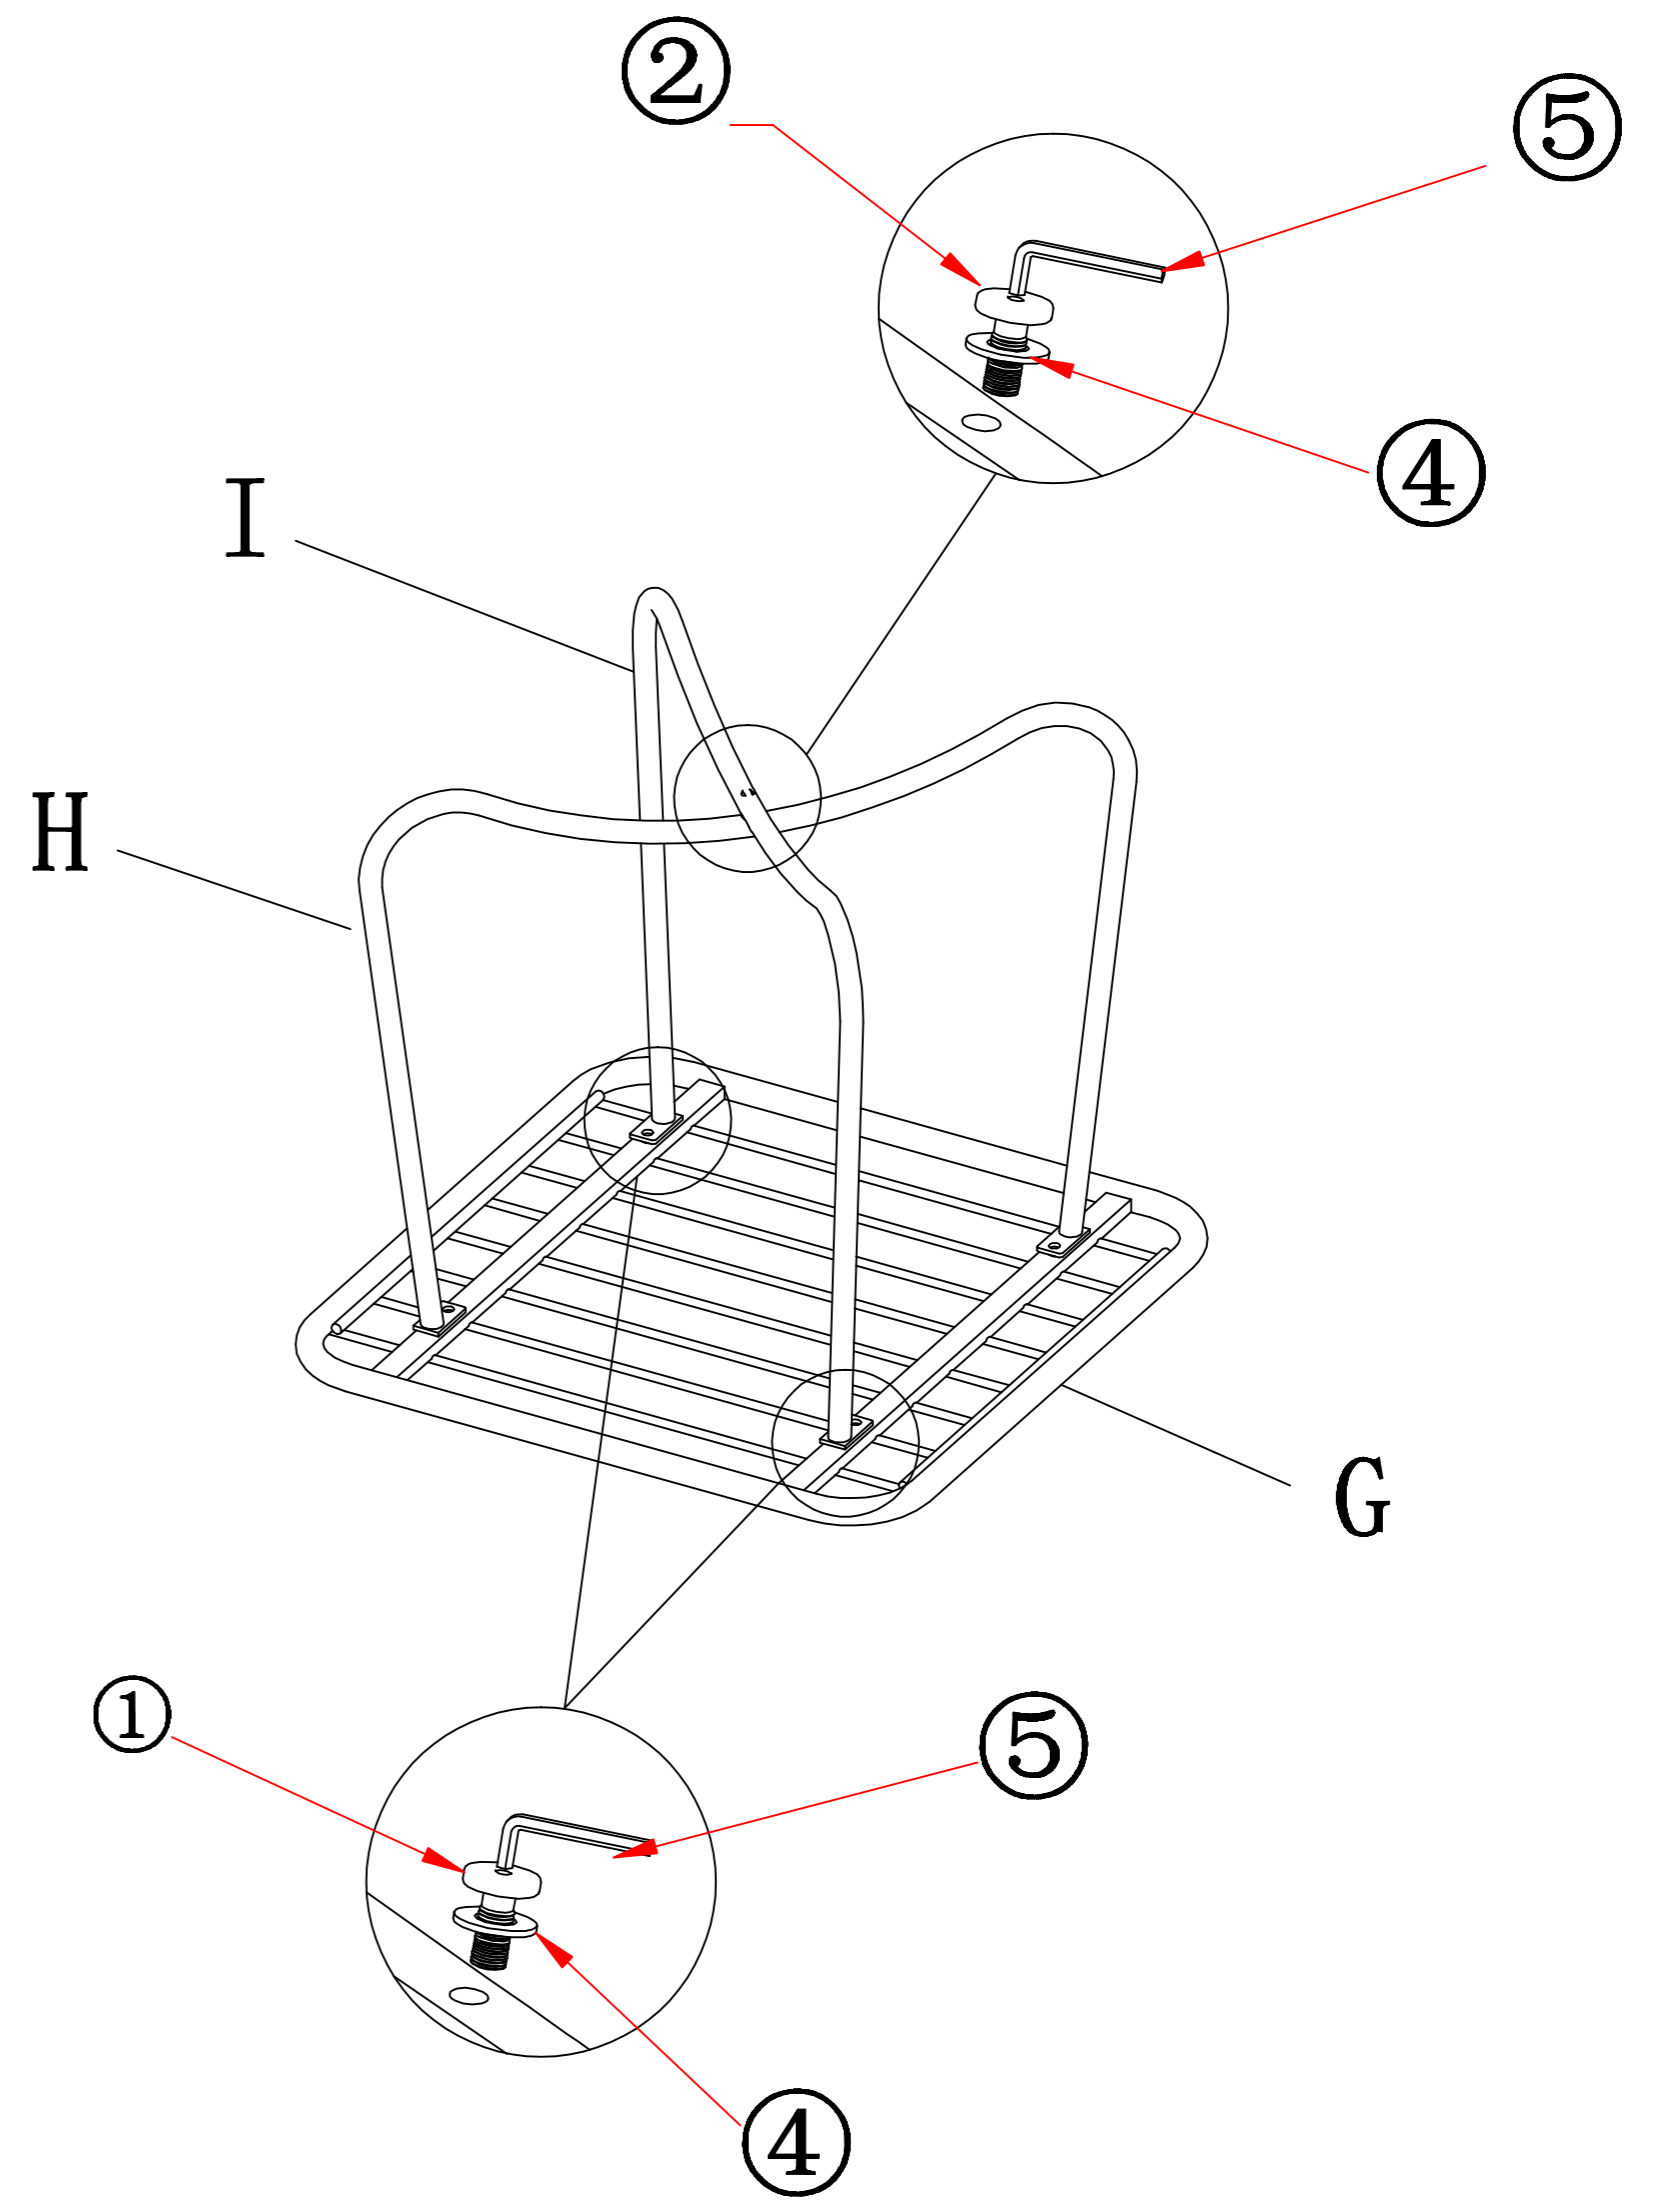

Step3:

