


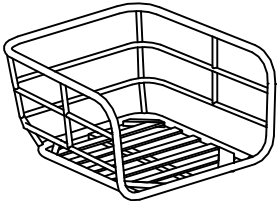
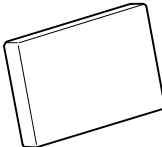

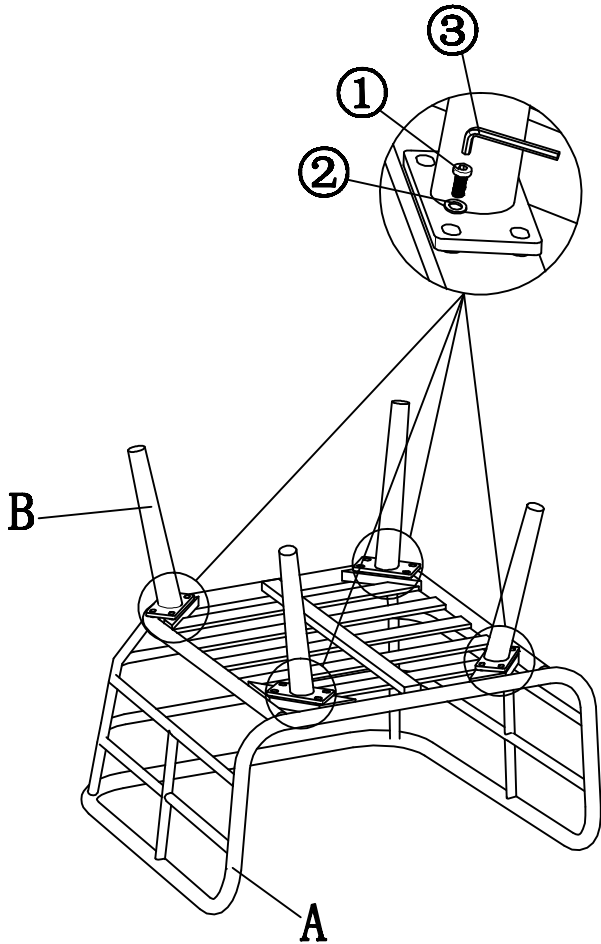
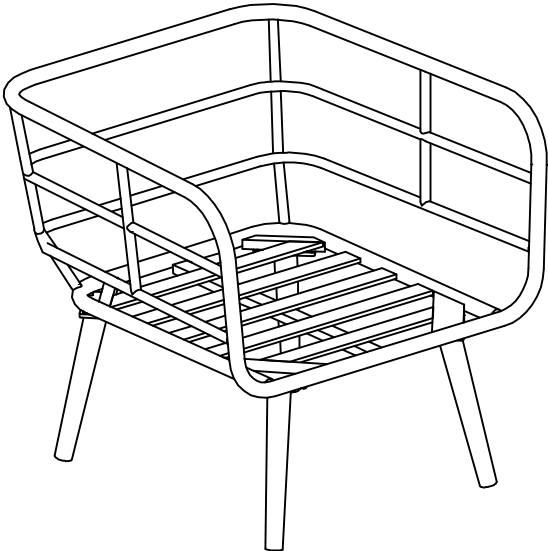
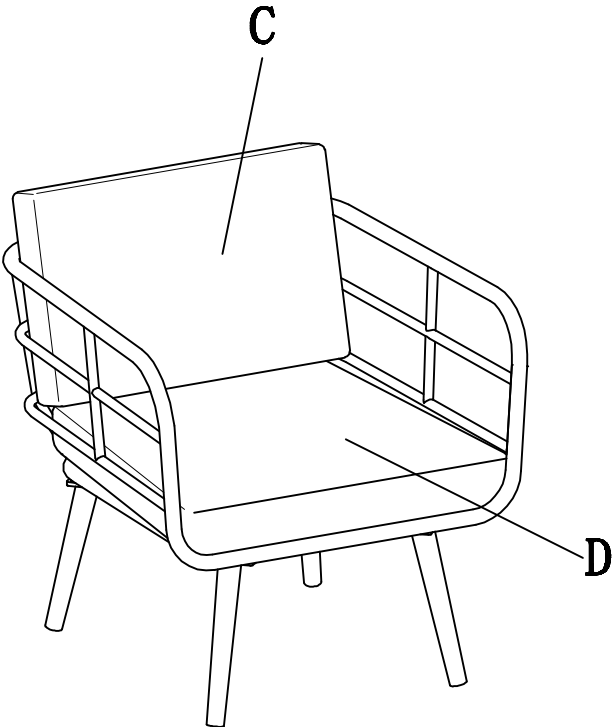


Assembly Instruction			
①	 M6*20mm 16PCS	②	 16PCS
	③	 1PC	
 A*1	 B*4	 C*1	 D*1
STEP1: 			
STEP2: 			
STEP3: 			


Assembly Instruction

①



M6*20mm 16PCS

②




16PCS


③




1PC

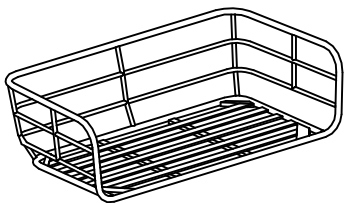


E*1



B*4

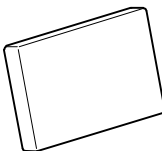

C*2



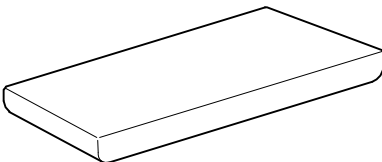


F*1

STEP1:


STEP2:

STEP3:

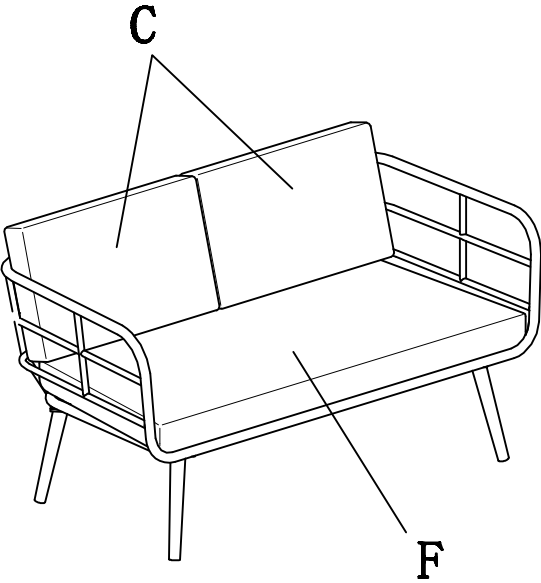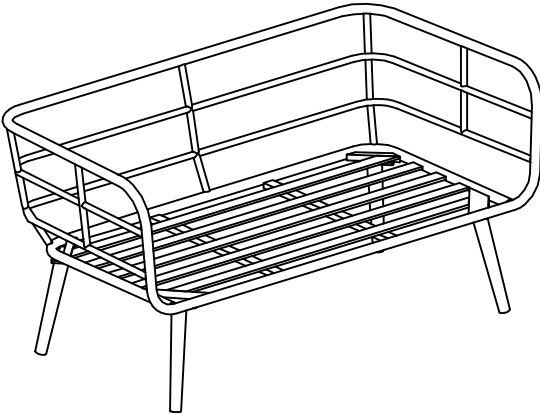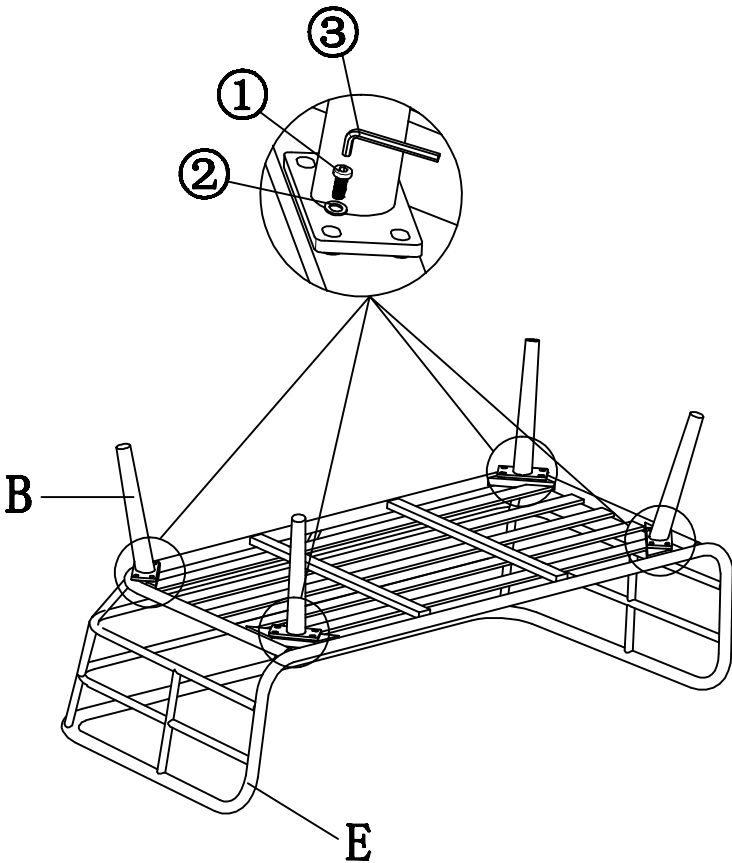


Assembly Instruction

①



M6*20mm 16PCS

②




16PCS


③




1PC

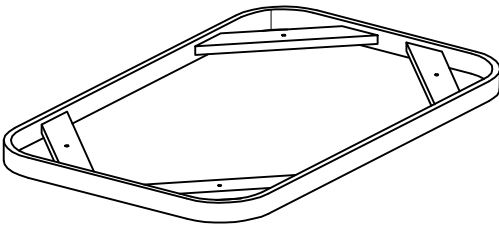

G*1



H*4

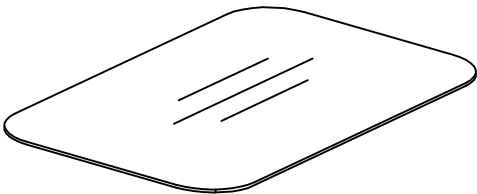

I*1

STEP1:

STEP2:

STEP3:

